

# Guidance on Taped Insulating Sheathing Drainage Planes: Final Report

Building America Report - 1301

December 2012 (Rev. 02/13)

Aaron Grin and Joseph Lstiburek

---

Abstract:



*This research provides simple, long term, and durable solutions when using tapes and flashing membranes in conjunction with the exterior face of rigid polymeric foam sheathing to create the drainage plane of a wall system. The knowledge gained from this research will be used in future Building America construction prototypes and well as other residential construction projects to increase the long-term moisture related durability of the enclosure, and reduce the risk of liquid water intrusion. The following are best practice and product recommendations from the interviewed contractors and homebuilders who collectively have a vast amount of experience.*

---

# Guidance on Taped Insulating Sheathing Drainage Planes

A. Grin, J. Lstiburek, *Building Science Corporation*

December 2012

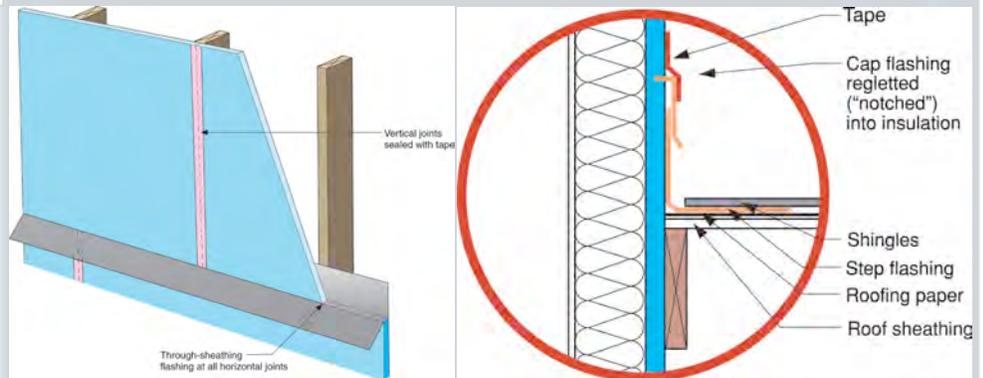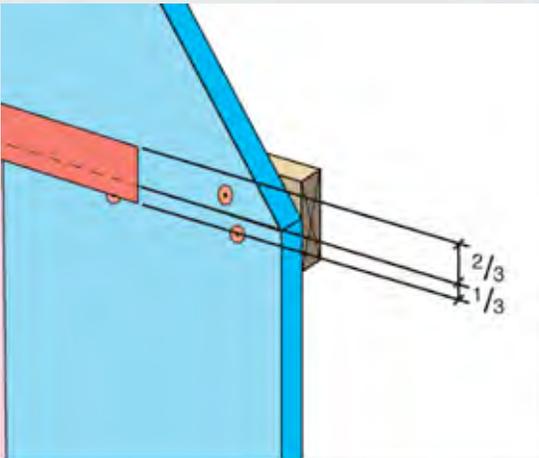

## NOTICE

This report was prepared as an account of work sponsored by an agency of the United States government. Neither the United States government nor any agency thereof, nor any of their employees, subcontractors, or affiliated partners makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represents that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States government or any agency thereof. The views and opinions of authors expressed herein do not necessarily state or reflect those of the United States government or any agency thereof.

Available electronically at <http://www.osti.gov/bridge>

Available for a processing fee to U.S. Department of Energy  
and its contractors, in paper, from:

U.S. Department of Energy  
Office of Scientific and Technical Information  
P.O. Box 62  
Oak Ridge, TN 37831-0062  
phone: 865.576.8401  
fax: 865.576.5728  
email: <mailto:reports@adonis.osti.gov>

Available for sale to the public, in paper, from:

U.S. Department of Commerce  
National Technical Information Service  
5285 Port Royal Road  
Springfield, VA 22161  
phone: 800.553.6847  
fax: 703.605.6900  
email: [orders@ntis.fedworld.gov](mailto:orders@ntis.fedworld.gov)  
online ordering: <http://www.ntis.gov/ordering.htm>



Printed on paper containing at least 50% wastepaper, including 20% postconsumer waste

## **Task 7 - Evaluation of Advanced Retrofit Measures and Development of Retrofit Measure Guidelines**

### **Guidance on Taped Insulating Sheathing Drainage Planes**

Prepared for:

Building America

Building Technologies Program

Office of Energy Efficiency and Renewable Energy

U.S. Department of Energy

Prepared by:

Building Science Corporation

30 Forest Street

Somerville, MA 02143



December 2012

**[This page left blank]**

## Contents

<b>List of Figures</b> .....	<b>ii</b>
<b>List of Tables</b> .....	<b>iii</b>
<b>Definitions</b> .....	<b>iv</b>
<b>Abstract</b> .....	<b>1</b>
<b>Progression Summary</b> .....	<b>2</b>
<b>1 Introduction</b> .....	<b>2</b>
<b>2 Decision Making Criteria</b> .....	<b>4</b>
Cost and Performance .....	4
Risk Identification.....	4
<b>3 Technical Description</b> .....	<b>5</b>
<b>4 Recommended Best Practices</b> .....	<b>5</b>
Penetration Details .....	5
Insulating Sheathing Joint Requirements, Recommendations, and Tape Materials .....	9
<b>5 Construction Sequencing Details for Recommendations</b> .....	<b>13</b>
GOOD - Basic Exterior Insulation Drainage Plane .....	13
BETTER - Improved Exterior Insulation Drainage Plane .....	16
BEST – Z-Flashed Exterior Insulation Drainage Plane .....	19
<b>6 Summary</b> .....	<b>22</b>
<b>Attachment A: Compliance</b> .....	<b>24</b>
<b>Attachment B: Product Materials</b> .....	<b>29</b>
<b>References</b> .....	<b>30</b>
<b>Appendix A – Homebuilder Interviews</b> .....	<b>31</b>
<b>Appendix B: Future Research - Exposure Rack Recommendation Verification</b> .....	<b>32</b>

## List of Figures

Figure 1 - Pan Flashing to Drain Openings .....	6
Figure 2 - Types of Pan Flashing .....	7
Figure 3 - Step 1 - Install Insulating Sheathing.....	7
Figure 4 - Step 2 - Install Backdam .....	7
Figure 5 - Step 3 Apply First Piece of Self-Adhered Sill Flashing .....	7
Figure 6 - Step 4 Install Second Piece of Sill Flashing .....	8
Figure 7 - Step 5 Install Corner Flashing Patches.....	8
Figure 8 - Step 6 Install Window .....	8
Figure 9 - Step 7 Install Self Adhered Jamb Flashing.....	8
Figure 10 - Step 8 Install Self Adhered Head Flashing .....	8
Figure 11 - Step 9 Termination Tape top edge of head flashing .....	8
Figure 12 - Roof to Wall Intersection .....	9
Figure 13 – Example Through Drainage Plane Z-Flashing .....	11
Figure 14 – Example Termination Tape Offset High on Butyl Tape.....	11
Figure 15 – Example Wide Tape Intentionally Offset High .....	12
Figure 16 - West Test Panels.....	33
Figure 17 - Center and East Test Panels .....	33
Figure 18 - West Test Panel Layout .....	34
Figure 19 - Center and East Panel Layout.....	34
Figure 20 - Full Exposure Test Platform.....	35
Figure 21 - Typar Tape on ffPIC (left) and XPS (right).....	36
Figure 22 - Typar Tape with Termination Tape on ffPIC (right) and XPS (left) .....	36
Figure 23 - Typar Tests .....	36
Figure 24 - Henry Blueskin on ffPIC (left) and XPS (right).....	37
Figure 25 - Henry Blueskin with Termination Tape on ffPIC (right) and XPS (left) .....	37
Figure 26 – Henry Blueskin Tests .....	37
Figure 27 - Dupont Tyvek Tape on ffPIC (left) and XPS (right).....	38
Figure 28 - Tuck Tape on ffPIC (left) and XPS (right) .....	38
Figure 29 - Dupont Tyvek Tape Tests .....	38
Figure 30 - Tuck Tape Tests .....	38
Figure 31 - Dupont Straightflash Tape on ffPIC (left) and XPS (right).....	39
Figure 32 - Dupont Straightflash Tape Tests .....	39
Figure 33 – Dow Weathermate Butyl with Termination Tape on ffPIC (left) and XPS (right).....	40
Figure 34 - Dow Weathermate Butyl with Termination Tape Tests.....	40
Figure 35 – Dow Weathermate Butyl on ffPIC (left) and XPS (right).....	41
Figure 36 - Dow Weathermate Butyl Tests .....	41
Figure 37 – Dow Weathermate Acrylic on ffPIC (left) and XPS (right).....	42
Figure 38 – Dow Weathermate Acrylic Tests .....	42
Figure 39 - Dow Weathermate Acrylic on ffPIC - Large Test .....	43
Figure 40 - Dow Aluminum White Foil on ffPIC - Large Test.....	43
Figure 41 - Dow Aluminum Foil on ffPIC - Large Test.....	43
Figure 42 - Dow Weathermate Butyl on ffPIC - Large Test .....	43
Figure 43 - Dow Weathermate Acrylic on XPS - Large Sample.....	44
Figure 44 - Dupont Tyvek Tape on XPS - Large Sample.....	44
Figure 45 - Dow Weathermate Butyl on XPS - Large Sample.....	44
Figure 46 - Dupont Straightflash on XPS - Large Sample .....	44
Figure 47 – West Large Sample Tests Upper.....	45
Figure 48 – West Large Sample Tests Lower .....	45
Figure 49 - Center Small Sample Tests .....	46
Figure 50 - East Small Sample Tests .....	47

## List of Tables

No table of figures entries found.

## Definitions

ffPIC      Foil Faced Polyisocyanurate  
XPS        Extruded Polystyrene

## Executive Summary

This guide provides information and recommendations to the following groups:

- Insulation contractors
- General contractors
- Builders
- Home remodelers
- Mechanical contractors
- Homeowners as a guide to the work that needs to be done

The following research was conducted by the Building Science Corporation (BSC) Building America Research Team's "Energy Efficient Housing Research Partnerships" project for Task Order No. KNDJ-1-40337-03. Guidance on Taped Insulating Sheathing Drainage Planes is Subtask 7.2 under Task 7.0 – Evaluation of Advanced Retrofit Measures and Development of Retrofit Measure Guidelines. The goal of this research is to provide durable and long-term water management solutions using exterior insulating sheathing as part of the water management system. It is possible to tape or seal the joints in insulating sheathing to create a drainage plane and even an air control layer. There exists the material durability component of the tape as well as the system durability component being the taped insulating sheathing as the drainage plane.

The following are best practice and product recommendations from the interviewed contractors and homebuilders who collectively have a vast amount of experience. Three significant items were discussed with the group which are required to make taped insulating sheathing a simple, long term, and durable drainage plane:

1. Horizontal joints should be limited or eliminated wherever possible
2. Where a horizontal joint exists use superior materials
3. Frequent installation inspection and regular trade training are required to maintain proper installation

Section 5 of this measure guideline contains the detailed construction procedure for the three recommended methods to effectively seal the joints in exterior insulating sheathing to create a simple, long term, and durable drainage plane.

## Progression Summary

### Install Exterior Insulation

Install Extruded Polystyrene or Foil Faced Polyisocyanurate Insulation Following Manufacturer's Installation Instructions



**Do Not Proceed if:**

- Surfaces are dusty or dirty
- Surfaces are wet or icy
- Large gaps in exterior insulation exist
- Exterior Temperature is below 15°F
- Insulating sheathing is not XPS or ffPIC



### Install Sill Flashings on Windows and Doors



**1**

Install sill flashings on windows and doors. Sill pan flashings are necessary to ensure proper water re-direction to the drainage plane.


### Install Penetration Flashings



**2**

Install flashings on all penetrations. These flashings are necessary to ensure water does not bypass the drainage plane and enter the assembly.

### Install Windows and Doors



**3**

Proper gravity lapping of the flashing tape around a window installation is important to ensure water does not enter the assembly and that water can get out of the assembly.


### Tape Exterior Insulation as Drainage Plane



**4**

Tape the exterior insulation as the drainage plane installing the tape following the tape manufacturer's instructions and the procedures in this document.

### Install Exterior Cladding



**5**

Install the exterior cladding of choice as per the manufacturer's recommendations.

## 1 Introduction

The lowest-cost, highest performing rainwater management strategy is rigid polymeric foam sheathing with sealed joints (Lstiburek 2006, 2010). There is an existing construction challenge of sealing the joints in rigid polymeric foam sheathing in a reliable and durable manner to prevent water ingress. This research provides simple, long term, and durable solutions to the water intrusion issues that are possible by using tapes and membranes as integral portions of the drainage plane of the wall system. The knowledge gained from this research will be used in future Building America construction prototypes and well as other residential construction projects to increase the long-term moisture related durability of the enclosure, and reduce the risk of liquid water intrusion.

Sustainability is not possible without durability; if you double the life of a building and you use the same amount of resources to construct it, the building is twice as resource efficient. Therefore durability is a key component of sustainability. It seems that one thing that both the development community and the environmental community can agree on is that durability is a good thing. The lessons of durability have come principally out of failure. Engineering is an iterative process of design by failure. Buildings are constructed. Problems are experienced. Designs and processes are changed. Better buildings are constructed. The building industry is in essence a reactive industry, not a proactive industry. It can be argued that the industry continues to do things until they become intolerably bad and then the industry changes. Examining failures gives us guidance on increasing the durability of building constructions. (BSD – 144)

Taping and sealing of joints in insulating sheathing has been occurring for over two decades. Some failures and many successes have been reported over this time frame. A survey of existing installations, installers, contractors, and builders was conducted to determine the factors of success and failure. The survey provides insight into how builders across the country make taped insulating sheathing a simple, long term, and durable drainage plane. Few details are readily available to new contractors who want to start using taped insulation sheathing or for those that want to improve their current practices. This research aims to provide feedback and key details from field application and testing which is not available from manufacturer's specification sheets or details.

The team members involved with this project include members from Building Science Corporation, BASF, Dow, and Dupont.

## 2 Decision Making Criteria

Overall, the goal of the U.S. Department of Energy's (DOE) Building America program is to “reduce home energy use by 30%-50% (compared to 2009 energy codes for new homes and pre-retrofit energy use for existing homes).” To this end, we conduct research to “develop market-ready energy solutions that improve efficiency of new and existing homes in each U.S. climate zone, while increasing comfort, safety, and durability.”

Using exterior board foam insulation as part of a whole house retrofit package can be a very effective method to reduce heat loss through the wall system aiding in achieving the energy use reduction goals of the U.S. DOE. Sealing the face of certain board foam insulation products can create an effective and code approved drainage plane. Some moisture related ingress failures due to failed joints have occurred in using this system prompting the necessity to develop further recommendations to improve the durability of the system.

### Cost and Performance

It is difficult to assign a cost to durability but the costs and associated issues that occur with enclosure failures resulting in moisture durability issues are very expensive. Our experience with many production homebuilders in the United States has provided us with anecdotal evidence that the costs (on average) to repair a house, have increased an order of magnitude from approximately \$100 ten years ago, to approximately \$1500 today, largely as a result of water management issues. Because this is an average, and some houses have no reported problems, the houses that do have problems cost significantly more than \$1500. This increase in costs is also related to an order of magnitude increase in the incidences of water management issues in the last decade from poorly installed and detailed water management systems.

According to discussions during the survey of builders responsible for over 27,000 homes in 2011 the following cost related information is summarized. Most builders found when comparing taped insulating sheathing to installing a sheet weather barrier system, both methods had approximately the same total installed cost. The labour and material costs, when considering a whole house, were roughly the same. The decision to choose one method over the other generally is not made based on the cost of installation. One builder has found with continued use of taped insulating sheathing as the drainage plane that a cost savings has developed. As a secondary benefit, some builders have seen an improvement in whole house airtightness as a result of using taped insulating sheathing as the drainage plane.

### Risk Identification

The builder survey indicated that taped insulating sheathing as the drainage plane has little to no risk when the correct materials are used and the installation is completed in a careful manner. Careless installation or improperly selected materials may result in issues. Each builder insisted that frequent installation inspection and regular trade training are required to maintain proper installation. The methods shown in Section 5 are the best practice recommendations that

minimize risk according to industry experience. Attachment A contains the ICC evaluation showing taped foam plastic insulating sheathing as a code compliant water-resistive barrier.

### **3 Technical Description**

The following research questions will be answered by this project.

- What materials are available for this purpose? What are the characteristics of these materials?
- Which new materials meet the performance requirements for water management with insulating sheathing?
- What is the experience of installers in all climates?

The performance of the taped sheathing system relies on material durability and system durability. The material durability component refers to the tape. The system durability component refers to the taped insulating sheathing as the drainage plane. Contractors have a unique perspective on these products and systems as they have first-hand experience in the site preparation & application. They also have an opportunity to see how the materials interact and perform over short time periods (e.g. during construction) and over longer time periods (e.g. through call-backs). Several contractors have implemented their own grass roots experimental programs to assess the buildability, performance, and durability of new products and systems. There is a need for researchers and product manufacturers to work with these contractors. An important first step is to document their experience, then to apply building science in the interpretation of the testing and to participate in the development of future products and testing.

### **4 Recommended Best Practices**

Little argument should remain in the industry over the energy efficiency based financial benefits of adding exterior insulation. Using the exterior insulation as the drainage plane, removing the necessity to install a sheet or liquid applied weather barrier is the next logical step. Field implementation and durably taping the joints in the insulation in a repeatable manner is discussed in Section 5.

To bring together the experience of the nation, six homebuilders were interviewed who represent the experience of building over 27,000 homes in 2011. Many of the recommendations from the homebuilders were in the form of recommended products or material properties (primarily adhesives). Installation methods and design recommendations are also included.

#### **Penetration Details**

In terms of window, door, and penetration flashing methods, most of the contractors and builders agreed that these details are already available and that using the right material and maintaining trade training and supervision were all that was required for success.

Flashings details are included in the following documents available online at [www.buildingscience.com](http://www.buildingscience.com):


- Water Management Details – Housewraps/Flashings/Windows
- Building Science Information Sheet 303 - Common Flashing Details
- Building Science Digest-013 - Rain Control in Buildings
- Building Science Digest-105 - Understanding Drainage Planes
- Building Science Digest-144 - Increasing the Durability of Buildings

More details are available in these books by Building Science Press:


- Water Management Guide
- Each of the climate specific Builder's Guides

In addition, almost every tape or flashing product manufacturer have, or are building, their own in-house drawings which depict their recommended installation methods.


Some of the most important penetrations to properly flash and drain are windows and doors. It is crucial to the durability of an assembly to install all windows and doors in a sub-sill pan flashing. All windows leak through their frames eventually and it is important that this water is properly directed outside the enclosure system. Figure 1 shows how the window or door is to sit in the pan flashing, Figure 2 shows three methods of creating the sub-sill pan flashing. The full process to install and flash the window is shown in Figure 3 through Figure 11. These same details shown can be applied to a door. There are other methods and improvements to these methods that can create similar systems, but these steps should be followed at a minimum.



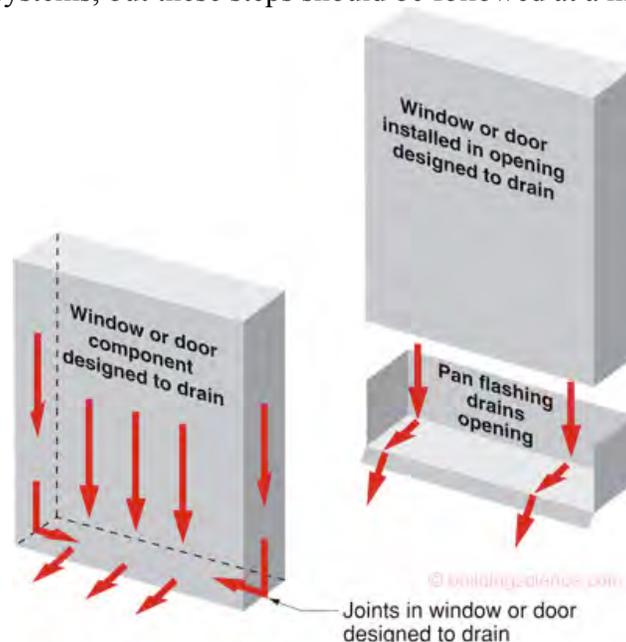


**Figure 1 - Pan Flashing to Drain Openings**

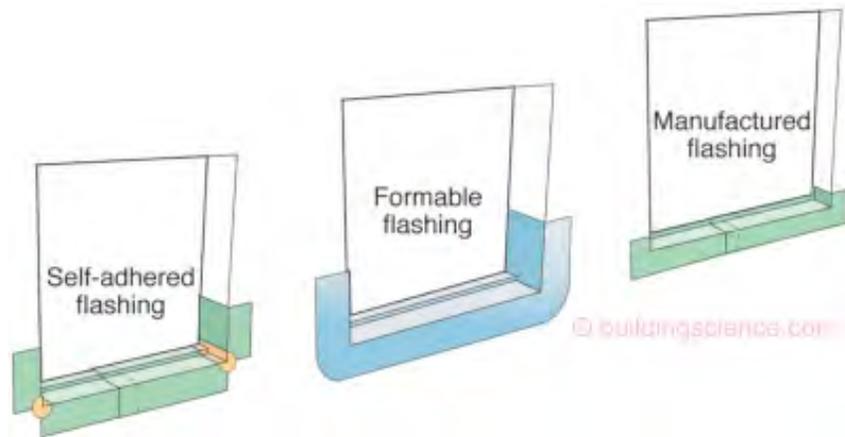

**Figure 2 - Types of Pan Flashing**

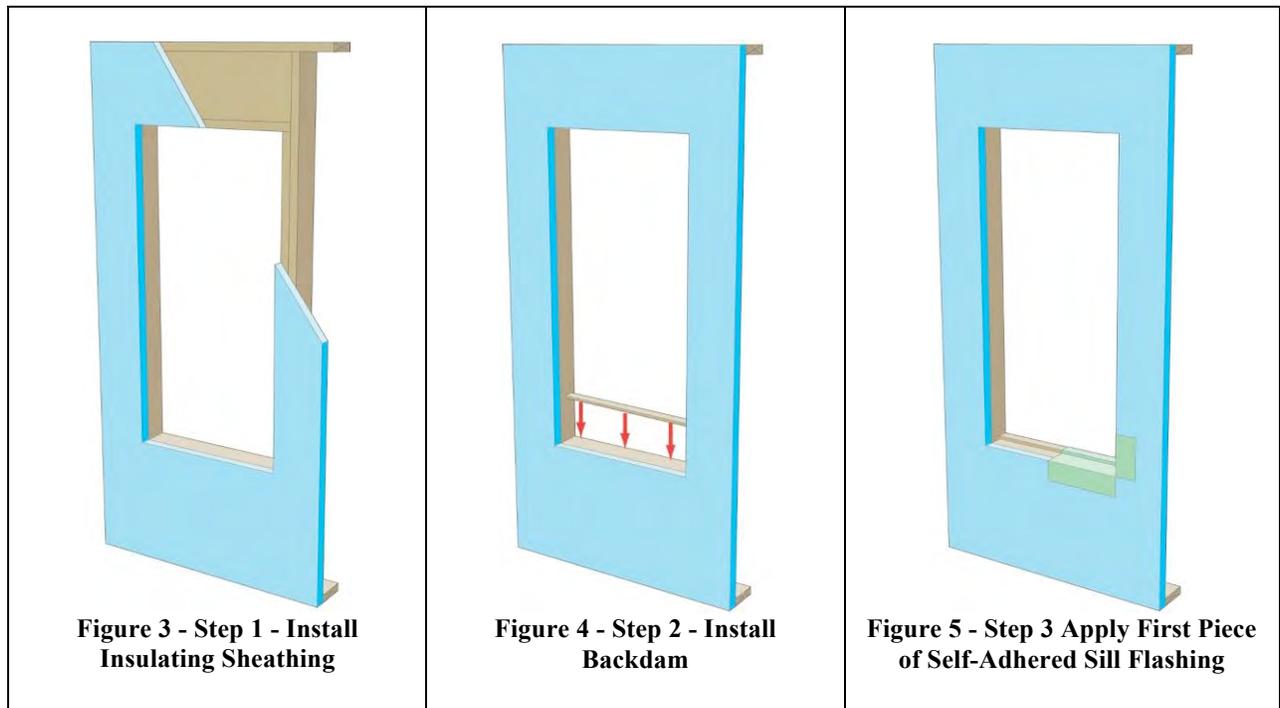

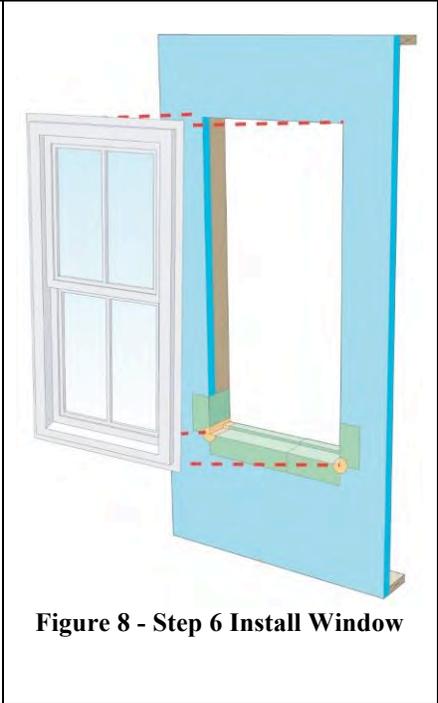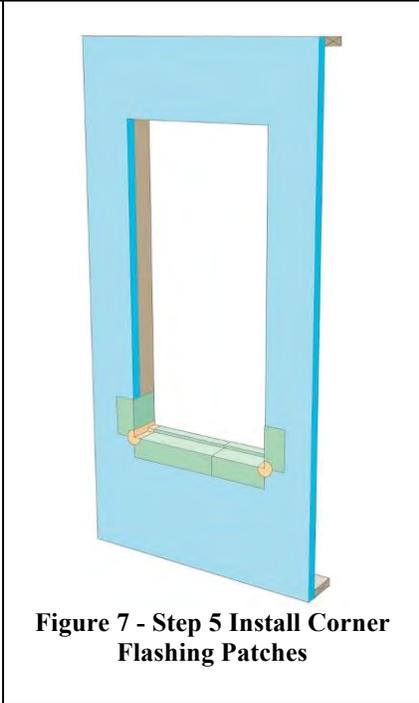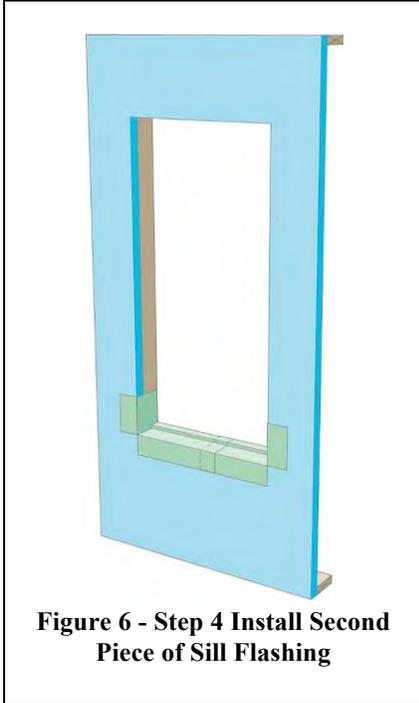

Other key details covered in more detail in the recommended documents include penetrations as well as intersections between roofs and walls. An example roof to wall detail is shown in Figure 12.

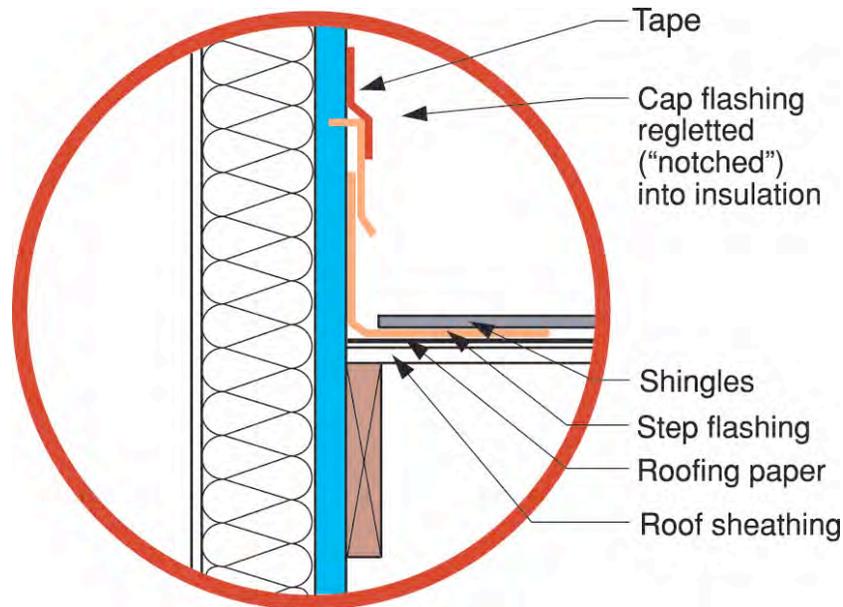


Figure 12 - Roof to Wall Intersection

### Insulating Sheathing Joint Requirements, Recommendations, and Tape Materials


The following are best practice and product recommendations from the interviewed contractors and homebuilders who collectively have a vast amount of experience. Three significant items were discussed with the group which are required to make taped insulating sheathing a simple, long term, and durable drainage plane:

4. Horizontal joints should be limited or eliminated wherever possible
5. Where a horizontal joint exists use superior materials
6. Frequent installation inspection and regular trade training are required to maintain proper installation

Where horizontal joints cannot be avoided, it was recommended by all contractors that cheap/poor/inferior products and methods should be avoided. This includes using tapes that are not designed as sheathing tapes, using thin polyethylene as z-flashing, installing narrow tape, not following the manufacturer's guidelines as to surface preparation etc. In their experiences, it is not worth the risk to save the few dollars to be found in buying the cheap tape materials or using short-cut methods and hoping they do not fail.

Each group interviewed had specific opinions on what methods and products produced a successful taped insulating sheathing drainage plane. All of the groups have used taped insulating sheathing as the drainage plane although not all groups currently use this method. The following is a summary of the homebuilder's opinions and recommendations:

- A superior thin tape is:
  - Acrylic adhesive based
  - Available in wide widths up to 4”
  - Through experience be able to adhere to almost any substrate with high reliability in a range of climatic situations
  - Have good temperature and UV resistance
  - Available nationwide at a competitive price
- A superior flashing tape is:
  - Butyl adhesive based
  - Not more than 20 mil thick (ensures overlaps do not build-up too much)
  - Available in 6” to 9” widths
  - Have a facer that is very expansion/contraction compatible with its adhesive substrate
  - Have a facer that is no wider than the adhesive as to not trap water
  - Through experience be able to adhere to almost any substrate with high reliability in a range of climatic situations
  - Have good temperature and UV resistance
  - Available nationwide at a competitive price, although builders would pay a premium for a product that repeatedly performed reliably
- Foil tapes rip easily, and their backer materials are sometimes difficult to deal with
- Foil tapes can have the tendency to ‘walk-off’ their substrates over time
- Drainage planes must be:
  - Smooth or not significantly textured
  - Clean
  - Dust free
  - Ideally warm
- Tapes must be:
  - Clean
  - Dust free
  - Ideally warm
- Z-flashings should be used on any high-risk horizontal joint (Figure 13)
  - Contractors who have walls with high water deposition and/or wind loads prefer to use Z-flashings for horizontal joints
  - Some contractors use this method for all horizontal joints
  - Butyl based tapes 6”-9” wide are preferred
  - No contractor recommends using polyethylene sheet as a Z-flashing

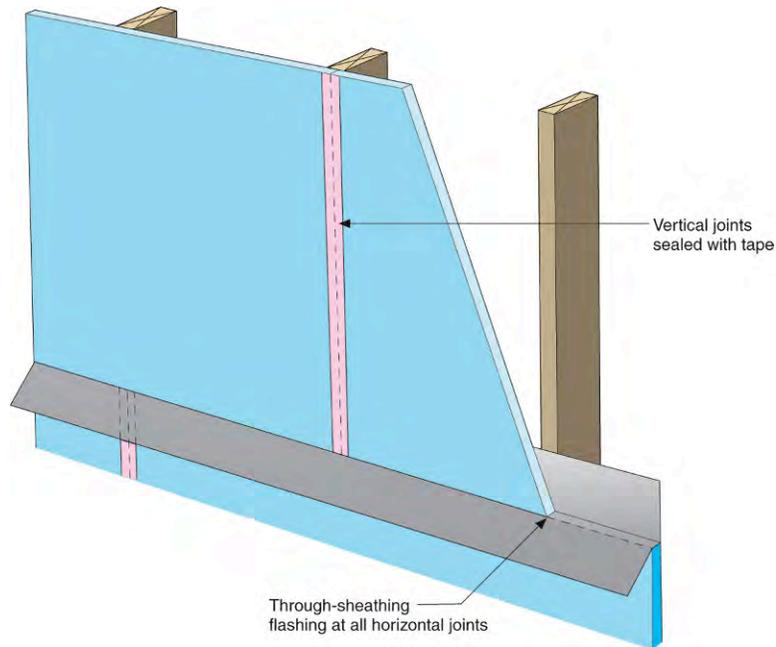


**Figure 13 – Example Through Drainage Plane Z-Flashing**

- Where thick tapes (20-30mil) are installed horizontally, a termination strip of thin tape should always be used (Figure 14).
- A tape termination strip is easier than a caulk termination strip.



**Figure 14 – Example Termination Tape Offset High on Butyl Tape**

- On horizontal joints, the tape should be offset favoring more tape and hence adherence to the upper sheet of substrate. In general 2/3 of the tape should be on the top sheet, and the remainder lapped over the bottom sheet (Figure 15).

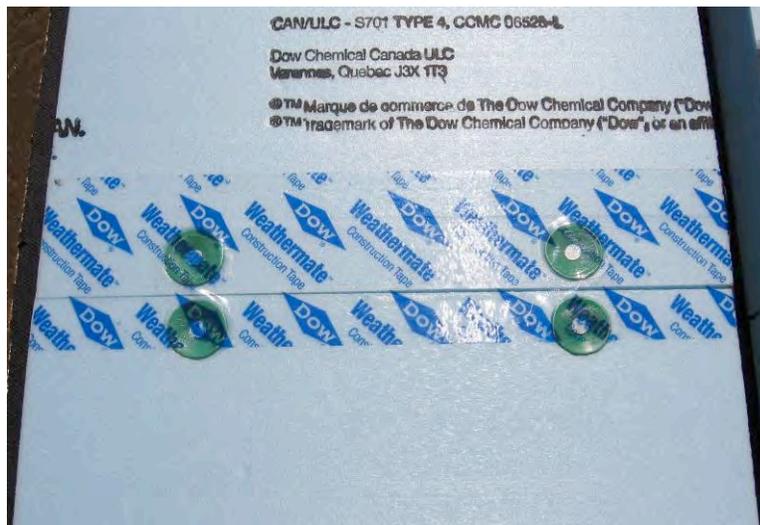

**Figure 15 – Example Wide Tape Intentionally Offset High**

- Backup wood blocking should be installed behind horizontal joint locations
  - Provides a backup and stiffness
  - Allows the perimeter of the sheet to be fastened properly
  - Provides support for when the tape is installed
- In terms of flashing tapes, almost all groups interviewed prefer butyl base tapes over asphaltic based tapes
- Vertical joints should land on framing members and be taped with a minimum 3” wide acrylic tape and gravity lapped with the horizontal joint




In an effort to confirm the opinions of the homebuilders interviewed and provide some insight to the long-term lifespan of various tape materials, recommended for use in a taped insulating sheathing drainage plane, an outdoor exposure rack will be developed and the tapes will be monitored over time.


Section 5 of this measure guideline contains the detailed construction procedure developed from the contractor recommendations. Three recommended methods are provided to effectively seal the joints in exterior insulating sheathing to create a simple, long term, and durable drainage plane.

Attachment B contains links to the materials discussed and recommended in this measure guideline.


## 5 Construction Sequencing Details for Recommendations

### GOOD - Basic Exterior Insulation Drainage Plane

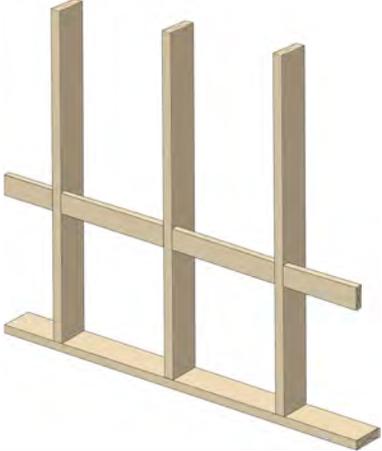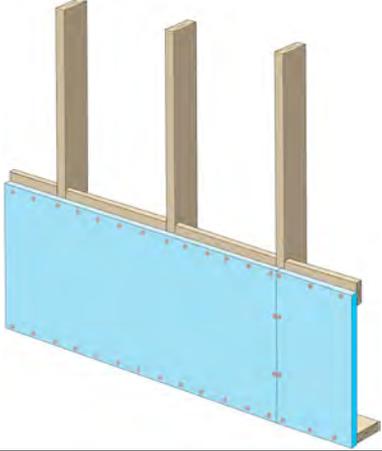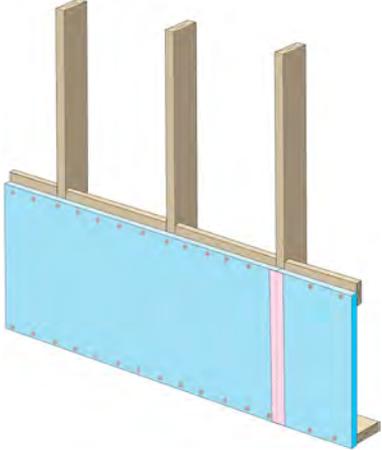	<p>Steps 1 - 14</p> <ol style="list-style-type: none"><li>1. Frame wall</li><li>2. Install horizontal blocking where joints in the exterior insulation will exist</li></ol>
	<ol style="list-style-type: none"><li>3. Install lower insulation as per manufacturer's recommendations</li></ol>
	<ol style="list-style-type: none"><li>4. Clean taping areas</li><li>5. Tape vertical joint on lower insulation</li><li>6. Press tape firmly to ensure adhesion</li></ol>

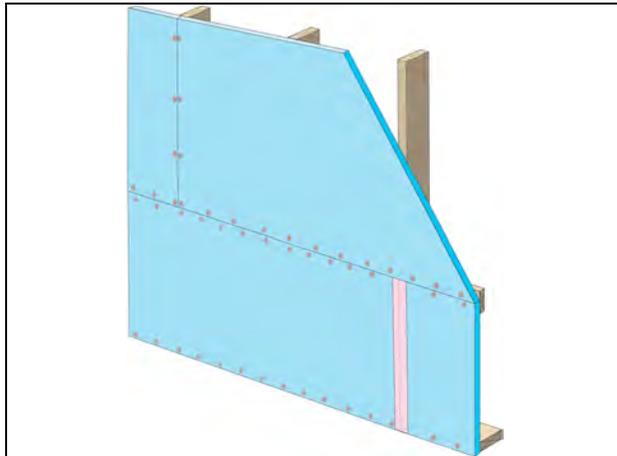


7. Install upper insulation as per manufacturer's recommendations

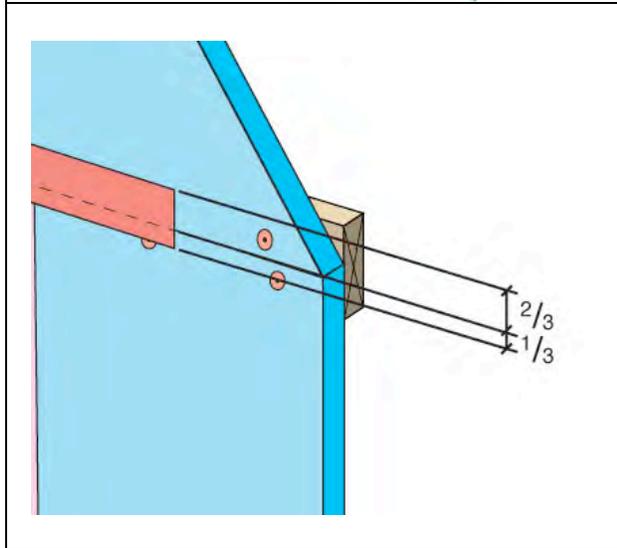

8. Clean taping areas
9. Tape horizontal joint with minimum 3" wide tape placing tape offset high on the joint. 2/3 of the tape should be adhered to the upper sheet of insulation.
10. Press tape firmly to ensure adhesion






11. Clean taping areas
12. Install tape on vertical joint of upper insulation
13. Press tape firmly to ensure adhesion

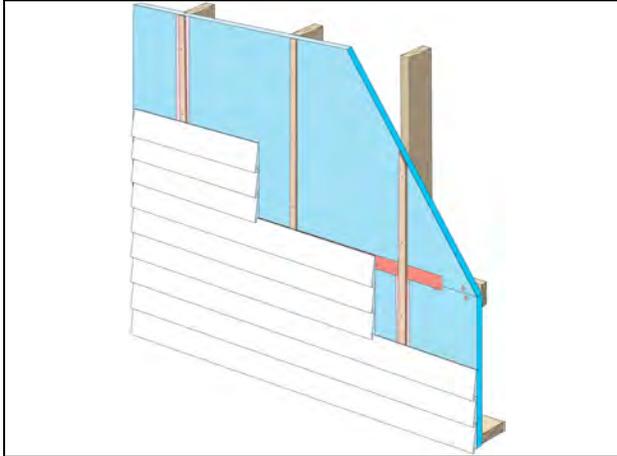


14. Wall is now ready for exterior cladding installation

## BETTER - Improved Exterior Insulation Drainage Plane

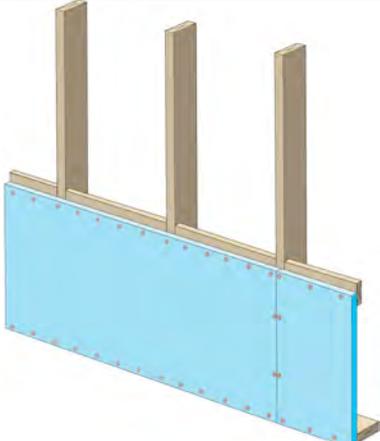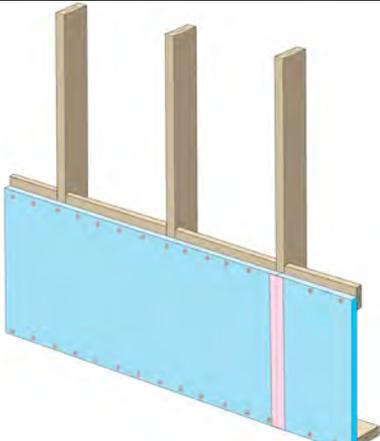	<p>Steps 1 - 17</p> <ol style="list-style-type: none"><li>1. Frame wall</li><li>2. Install horizontal blocking where joints in the exterior insulation will exist</li></ol>
	<ol style="list-style-type: none"><li>3. Install lower insulation as per manufacturer's recommendations</li></ol>
	<ol style="list-style-type: none"><li>4. Clean taping areas</li><li>5. Install 3" tape on vertical joint of lower insulation</li><li>6. Press tape firmly to ensure adhesion</li></ol>

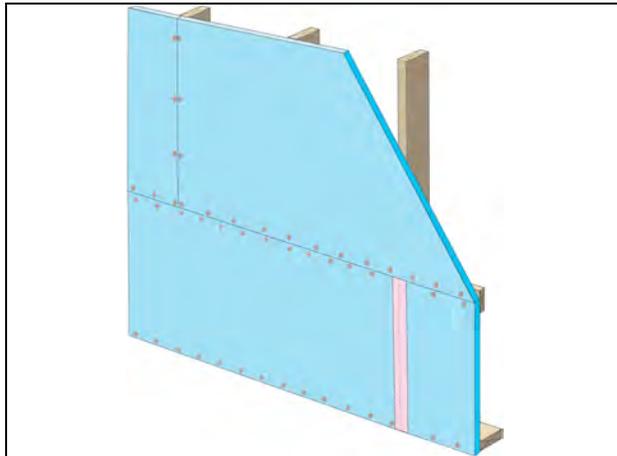


7. Install upper insulation as per manufacturer's recommendations

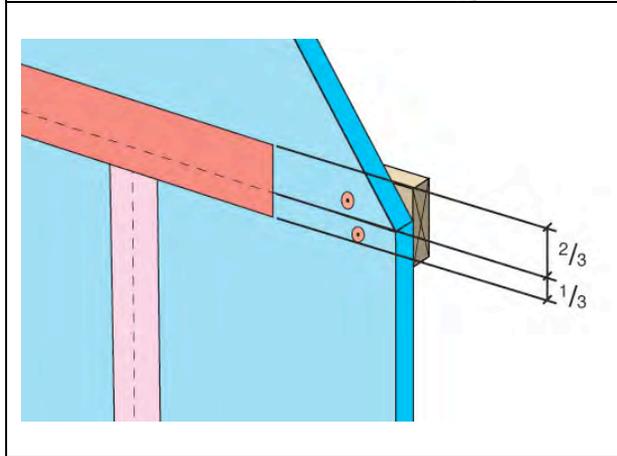

8. Clean taping areas

9. Tape horizontal joint with 4" wide butyl tape placing tape offset high on the joint. 2/3 of the tape should be adhered to the upper sheet of insulation.


10. Press tape firmly to ensure adhesion

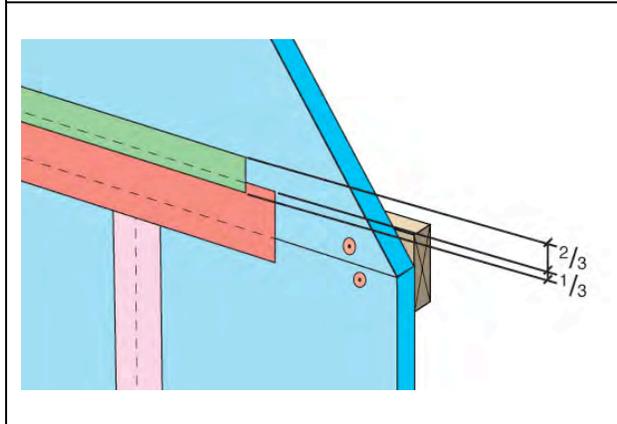

11. Clean taping areas

12. Terminate 4" tape with 2" wide tape placing tape offset high on the joint. 2/3 of the tape should be adhered to the sheet of insulation.


13. Press tape firmly to ensure adhesion

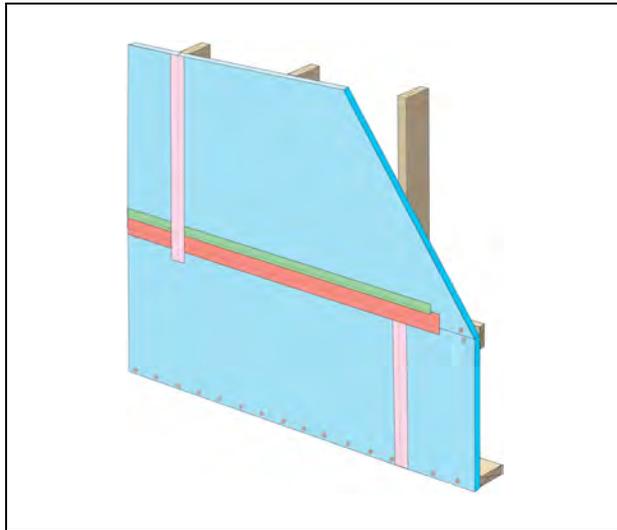

14. Clean taping areas




15. Install 3" tape on vertical joint of upper insulation overlapping the horizontal joint.




16. Press tape firmly to ensure adhesion

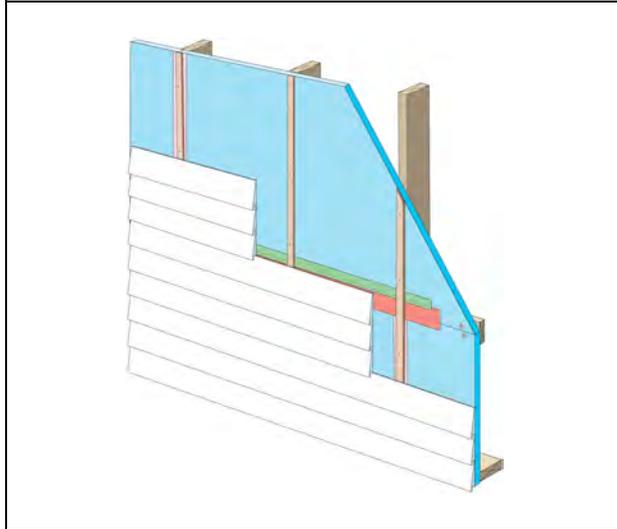


17. Wall is now ready for exterior cladding installation

## BEST – Z-Flashed Exterior Insulation Drainage Plane

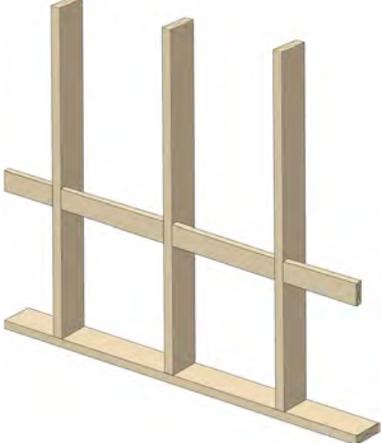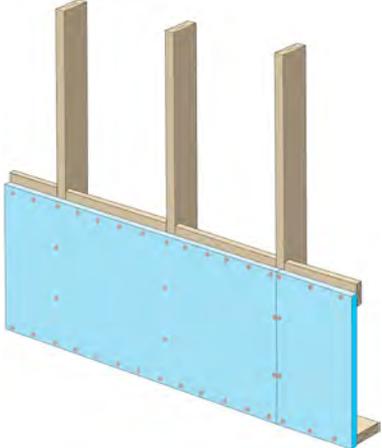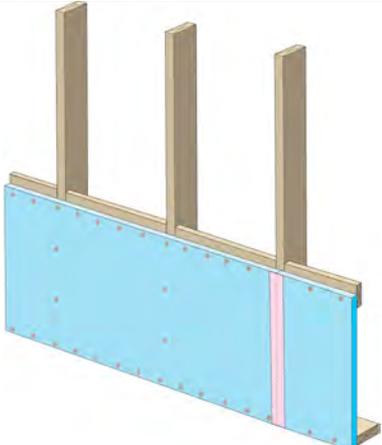	<p>Steps 1 - 16</p> <ol style="list-style-type: none"><li>1. Frame wall</li><li>2. Install horizontal blocking where joints in the exterior insulation will exist</li></ol>
	<ol style="list-style-type: none"><li>3. Install lower insulation as per manufacturer's recommendations</li></ol>
	<ol style="list-style-type: none"><li>4. Clean taping areas</li><li>5. Install 3" tape on vertical joint of lower insulation</li><li>6. Press tape firmly to ensure adhesion</li></ol>

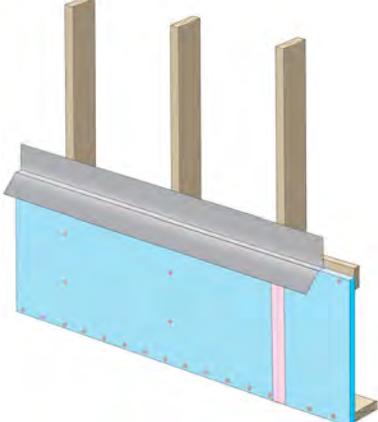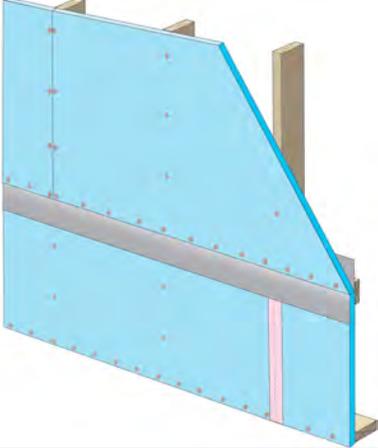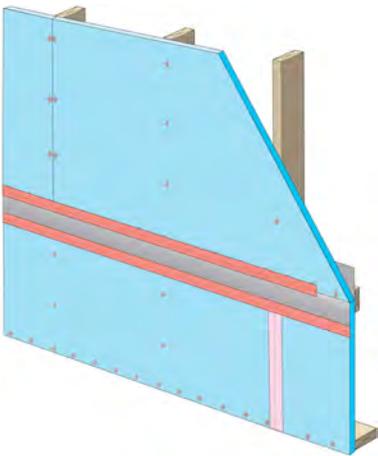
	<p>7. Install minimum 6” wide self-adhered butyl Z-flashing.</p>
	<p>8. Install upper insulation as per manufacturer's recommendations</p>
	<p>9. Clean taping areas</p> <p>10. Tape the joint between the top insulation sheet and the Z-flashing with 2” wide tape to improve air tightness</p> <p>11. Terminate Z-Flashing with 2” wide tape.</p> <p>12. Press tape firmly to ensure adhesion</p>

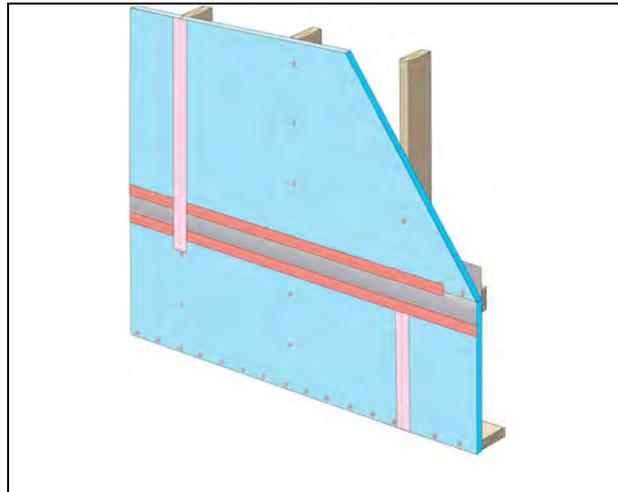

13. Clean taping areas

14. Install 3" tape on vertical joint of upper insulation overlapping the horizontal joint

15. Press tape firmly to ensure adhesion

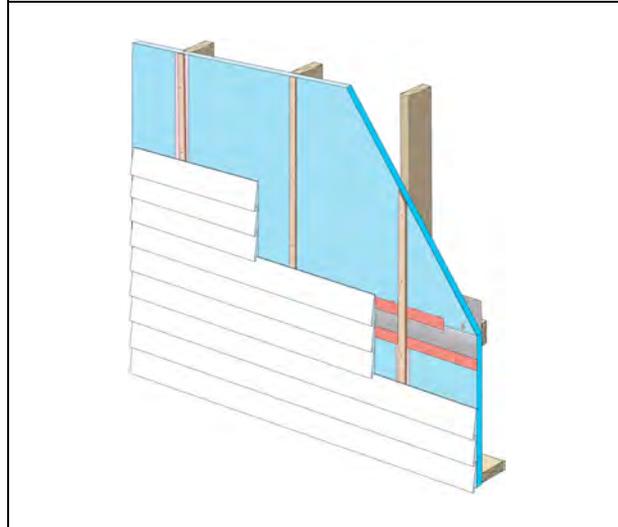

16. Wall is now ready for exterior cladding installation

## 6 Summary

Questions 1 and 2 - What materials are available for this purpose? What are the characteristics of these materials? Which new materials meet the performance requirements for water management with insulating sheathing?

Answer.

- A superior thin tape is:
  - Acrylic adhesive based
  - Available in wide widths up to 4”
  - Through experience be able to adhere to almost any substrate with high reliability in a range of climatic situations
  - Have good temperature and UV resistance
  - Available nationwide at a competitive price
- A superior flashing tape is:
  - Butyl adhesive based
  - Not more than 20 mil thick (ensures overlaps do not build-up too much)
  - Available in 6, 9, and 12” widths
  - Have a facer that is very expansion/contraction compatible with its adhesive substrate
  - Have a facer that is no wider than the adhesive as to not trap water
  - Through experience be able to adhere to almost any substrate with high reliability in a range of climatic situations
  - Have good temperature and UV resistance
  - Available nationwide at a competitive price

Question 3 - What is the experience of installers in all climates?

Answers:

The following are best practice and product recommendations from the interviewed contractors and homebuilders who collectively have a vast amount of experience. Three items are required to make taped insulating sheathing a simple, long term, and durable drainage plane:

1. Horizontal joints should be limited or eliminated wherever possible
2. Where a horizontal joint exists use high quality materials
3. Frequent installation inspection and regular trade training are required

The following is a summary of the homebuilder’s opinions and recommendations on methods and products:

- On horizontal joints, the tape should be offset favoring more tape on the upper sheet of substrate. A decent rule is that 2/3 of the tape should be on the top sheet, and the remainder lapped over the bottom sheet

- Z-flashings can be used on all horizontal joints and should be used on any high-risk horizontal joint
- Drainage planes and tapes must be smooth, clean, dust free, and ideally warm
- A termination strip of thin tape should always be used for thick tapes
- Backup wood blocking should be installed behind horizontal joint locations
- Vertical joints should land on framing members and be taped with a minimum 3” wide acrylic tape and gravity lapped with the horizontal joint
- In terms of flashing tapes, almost all groups interviewed prefer butyl based tapes over asphaltic based tapes
- Dow Weathermate is a thin tape product that was recommended by most homebuilders
- Dow Weathermate Flashing is a flashing tape product that was recommended by most homebuilders

## **Attachment A: Compliance**

International Code Council Evaluation Service – AC71 – Acceptance Criteria for Foam Plastic Sheathing Panels Used as Water-Resistive Barriers



[www.icc-es.org](http://www.icc-es.org) | (800) 423-6587 | (562) 699-0543 A Subsidiary of the International Code Council®

## ACCEPTANCE CRITERIA FOR FOAM PLASTIC SHEATHING PANELS USED AS WATER-RESISTIVE BARRIERS

AC71

Approved February 2003

Effective March 1, 2003

(Editorially revised March 2011)

Previously approved January 2002, June 2001, August 1966

### PREFACE

Evaluation reports issued by ICC Evaluation Service, LLC (ICC-ES), are based upon performance features of the International family of codes and other widely adopted code families, including the Uniform Codes, the BOCA National Codes, and the SBCCI Standard Codes. Section 104.11 of the *International Building Code*® reads as follows:

The provisions of this code are not intended to prevent the installation of any materials or to prohibit any design or method of construction not specifically prescribed by this code, provided that any such alternative has been approved. An alternative material, design or method of construction shall be approved where the building official finds that the proposed design is satisfactory and complies with the intent of the provisions of this code, and that the material, method or work offered is, for the purpose intended, at least the equivalent of that prescribed in this code in quality, strength, effectiveness, fire resistance, durability and safety.

Similar provisions are contained in the Uniform Codes, the National Codes, and the Standard Codes.

This acceptance criteria has been issued to provide all interested parties with guidelines for demonstrating compliance with performance features of the applicable code(s) referenced in the acceptance criteria. The criteria was developed and adopted following public hearings conducted by the ICC-ES Evaluation Committee, and is effective on the date shown above. All reports issued or reissued on or after the effective date must comply with this criteria, while reports issued prior to this date may be in compliance with this criteria or with the previous edition. If the criteria is an updated version from the previous edition, a solid vertical line (|) in the margin within the criteria indicates a technical change, addition, or deletion from the previous edition. A deletion indicator (—) is provided in the margin where a paragraph has been deleted if the deletion involved a technical change. This criteria may be further revised as the need dictates.

ICC-ES may consider alternate criteria, provided the report applicant submits valid data demonstrating that the alternate criteria are at least equivalent to the criteria set forth in this document, and otherwise demonstrate compliance with the performance features of the codes. Notwithstanding that a product, material, or type or method of construction meets the requirements of the criteria set forth in this document, or that it can be demonstrated that valid alternate criteria are equivalent to the criteria in this document and otherwise demonstrate compliance with the performance features of the codes, ICC-ES retains the right to refuse to issue or renew an evaluation report, if the product, material, or type or method of construction is such that either unusual care with its installation or use must be exercised for satisfactory performance, or if malfunctioning is apt to cause unreasonable property damage or personal injury or sickness relative to the benefits to be achieved by the use of the product, material, or type or method of construction.

Acceptance criteria are developed for use solely by ICC-ES for purposes of issuing ICC-ES evaluation reports.

Copyright © 2011

## ACCEPTANCE CRITERIA FOR FOAM PLASTIC SHEATHING PANELS USED AS WATER-RESISTIVE BARRIERS (AC71)

### 1.0 INTRODUCTION

**1.1 Purpose:** The purpose of this acceptance criteria is to establish requirements for foam plastic sheathing panels to be recognized in an ICC Evaluation Service, LLC (ICC-ES), evaluation report under the 2009 *International Building Code*® (2009 IBC), the 2009 *International Residential Code*® (2009 IRC), the 2006 *International Building Code*® (2006 IBC), the 2006 *International Residential Code*® (2006 IRC) and the 1997 *Uniform Building Code*™ (UBC). The bases of recognition are IBC Section 104.11, IRC Section R104.11 and UBC Section 104.2.8.

The reason for the development of this criteria is to establish test requirements that will permit the foam plastic sheathing panels to be used as water-resistive barriers in combustible construction, since the codes do not provide requirements for the material to be used in this manner.

#### 1.2 Scope:

**1.2.1** This criteria is limited to foam plastic insulation and associated joint sealing methods used on exterior walls as an alternative to the water-resistive barrier specified in Section 1404.2 of the IBC and Section R703.2 of the IRC; and the weather-resistive barrier specified in Section 1402.1 of the UBC.

**1.2.2** This criteria is limited to foam plastic insulation recognized in a current ICC-ES evaluation report showing compliance with Sections 3.4.1 or 3.4.3 of the ICC-ES Acceptance Criteria for Foam Plastic Insulation (AC12).

**1.2.3** This criteria does not address the use of the foam plastic insulation as structural sheathing, resisting in-plane or out-of-plane loadings.

**1.2.4** This criteria does not require reporting of the water vapor transmission properties of the foam plastic insulation.

#### 1.3 Definitions:

**1.3.1 Water-resistive Barrier:** For the purposes of this criteria, the term "water-resistive barrier" includes within its scope water-resistive barrier under Section 1404.2 of the IBC, water-resistive barrier under Section R703.2 of the IRC and weather-resistive barrier under Section 1402.1 of the UBC.

**1.3.2 Foam Plastic Sheathing Panels Used as Weather Resistive Barrier:** Foam plastic boards, sheets, or panels, when installed on an exterior wall with joint sealing methods or treatments, are intended to prevent water intrusion into the wall cavity. These products may be faced or unfaced.

**1.3.3 Joint-sealing Treatments:** Joint-sealing treatments are tapes, or caulks, or materials that are used to seal joints that may occur between two or more edges of the foam plastic insulation.

**1.3.4 Joint-sealing Methods:** Joint-sealing methods are mechanical edge treatments of foam plastic sheathing panels such as, but not limited to tongue and groove or ship-lapped edges.

#### 1.4 Codes and Referenced Standards:

**1.4.1** 2009 *International Building Code*® (2009 IBC), International Code Council.

**1.4.2** 2009 *International Residential Code*® (2009 IRC), International Code Council.

**1.4.3** 2006 *International Building Code*® (2006 IBC), International Code Council

**1.4.4** 2006 *International Residential Code*® (2006 IRC), International Code Council.

**1.4.5** *Uniform Building Code*™.

**1.4.6** ASTM E 331-00, Standard Test Method for Water Penetration of Exterior Windows, Skylights, Doors and Curtain Walls by Uniform Static Air Pressure Difference, ASTM International.

**1.4.7** AATCC, Test Method 127-1998, Water Resistance: Hydro Static Pressure Test, American Association of Textile Chemists and Colorists.

### 2.0 BASIC INFORMATION

**2.1 General:** The following information shall be submitted:

**2.1.1 Product Description:** Complete information concerning material specifications, thickness, size and the manufacturing process shall be submitted for the foam plastic insulation. Information concerning joint treatment materials, including manufacturer and material specifications, shall be provided.

**2.1.2 Installation Instructions:** Installation details and limitations, fastening methods, joint treatments, and face treatments.

**2.1.3 Packaging and Identification:** A description of the method of packaging and field identification of the system components. Identification provisions on the foam plastic insulation and on proprietary treatment materials shall include the evaluation report number and the name or logo of the inspection agency.

**2.1.4 Field Preparation:** A description of the methods of field-cutting, application and finishing.

**2.2 Testing Laboratories:** Testing laboratories shall comply with Section 2.0 of the ICC-ES Acceptance Criteria for Test Reports (AC85) and Section 4.2 of the ICC-ES Rules of Procedure for Evaluation Reports, and shall be accredited for the scope of tests covered by this criteria.

**2.3 Test Reports:** Test reports shall comply with AC85.

**2.4 Product Sampling:** Products for testing shall be sampled in accordance with Section 3.2 of AC85. Upon submission of initial, qualifying test data to ICC-ES, the manufacturer shall submit an affidavit certifying that the product tested is representative of the standard manufactured product for which recognition is being sought. Alternately, the manufacturer may choose to have the product sampled independently by an accredited inspection agency (in lieu of the affidavit).

### 3.0 TEST AND PERFORMANCE REQUIREMENTS

Reports of the following tests shall be submitted:

#### 3.1 Foam Plastic Insulation—Water-resistance:

**3.1.1** Water-resistance testing shall be conducted on the foam plastic insulation for which recognition is sought.

**3.1.2** Three specimens [each 8 inches (203 mm) square] of the foam plastic insulation shall be at the minimum thickness and density intended for use and be

**ACCEPTANCE CRITERIA FOR FOAM PLASTIC SHEATHING  
PANELS USED AS WATER-RESISTIVE BARRIERS (AC71)**

faced (if facers are used) with the material for which recognition is sought.

**3.1.3** The test specimens shall be weathered in accordance with Section 3.5 of this criteria.

**3.1.4** Water-resistance tests shall be conducted on the weathered specimens in accordance with AATCC Test Method 127. Testing in accordance with AATCC Test Method 127 shall be such that the specimens shall be held at a hydrostatic head of 21.6 inches (55 cm) for a period of 5 hours.

**3.1.5 Conditions of Acceptance:** Weathered specimens shall not exhibit water leakage on the underside of any specimen.

**3.2 Joint-sealing Treatments:**

**3.2.1 General:** Joint-sealing treatments shall meet the requirements of Section 3.2.2 and 3.4 of this criteria. Testing shall be conducted for each type of joint with respect to the substrate materials that form foam-to-foam or foam-to-flashing joints.

**3.2.2** Three specimens of each joint-sealing treatment are required. The test specimens shall be prepared with 3-inch-by-6-inch (76 mm by 152 mm) pieces of the foam plastic insulation and the joint sealing treatments for which recognition is being sought. Each specimen includes the two pieces of substrate materials aligned so that the 6-inch (152 mm) edges are butt-jointed. The joint-sealing treatment is applied to the pieces along the 6 in. (152 mm) dimension of the joint. The sample joint shall be unbacked unless recognition is sought for other joint constructions.

**3.2.3** The joint-sealing treatment specimens shall be exposed to the weathering conditions of Section 3.5 of this criteria.

**3.2.4** Water-resistance tests shall be conducted on the weathered specimens in accordance with AATCC Test Method 127. Testing in accordance with AATCC Test Method 127 shall be such that the specimens shall be held at a hydrostatic head of 21.6 inches (55 cm) for a period of 5 hours. Testing shall be conducted such that the joint treatment is exposed to the hydrostatic head. In the case of tapes, the hydrostatic head shall be positioned over both the joint area and the interface of the tape and the foam insulation.

**3.2.5 Conditions of Acceptance:** Weathered specimens shall not exhibit water leakage on the underside of any specimen.

**3.3 Joint-sealing Methods:** Joint-sealing methods that incorporate tongue and groove, ship-lap joints or similar methods without treatments, shall be evaluated using Section 3.4 of this criteria.

**3.4 Water Penetration Test of Wall Assembly:**

**3.4.1 General:** Tests shall be conducted on a wall assembly containing the foam plastic insulation with joint sealing methods or treatments applied to framing in accordance with IBC Section 1403.2, Exception 2, and ASTM E 331, as follows:

**3.4.1.1** Test assemblies shall be at least 4 feet wide by 8 feet high (1219 mm by 2438 mm) in size. The foam plastic sheathing panels as well as the joint sealing treatments or methods shall be installed in the manner for which recognition is sought. Assemblies shall include at

least one vertical joint representative of normal installation methods. When recognition is sought for horizontal joints, assemblies shall include at least two horizontal joints. All joints shall be unbacked unless other specific recognition is sought.

**3.4.1.2** The assemblies shall be tested without exterior wall coverings. Openings or penetrations in the test assemblies are not required. When the assembly is tested with openings and penetrations, Section 4.2 of this criteria shall not apply.

**3.4.1.3** The test assemblies shall be tested at a minimum differential pressure of 6.24 psf (0.297 kN/m<sup>2</sup>).

**3.4.1.4** The test assemblies shall be subjected to a minimum test exposure duration of 2 hours.

**3.4.1.5 3.4.1.5 Conditions of Acceptance:** Water shall not penetrate to the unexposed face of the foam plastic insulation.

**3.5 Weathering Tests:**

**3.5.1** When weathering tests are required by Section 3.1 or 3.2 of this criteria, specimens shall be subjected to ultraviolet light exposure in accordance with Section 3.5.2 followed by accelerated aging in accordance with Section 3.5.3.

**3.5.2 Ultraviolet Light Exposure:** Samples shall be exposed to light from ultraviolet sun lamps for 210 hours (10 hours per day for 21 days). Ultraviolet light exposure shall be directed on the sample surfaces that will be exposed to sunlight in normal application. Lamps and enclosure shall be adjusted so the specimen temperature is between 135°F and 140°F (57°C and 60°C). Sunlamp bulbs shall be General Electric Type H275 RUV (275 W) or equivalent bulbs, providing UV characteristics of 5.0 W/m<sup>2</sup>/nm irradiance at a wavelength of 315 to 400 nm at 1 meter.

**3.5.3 Accelerated Aging:** The specimens shall be subjected to 25 cycles of drying and soaking as follows:

1. Oven drying at 120°F (49°C) for three hours, with all surfaces exposed.
2. Immersion in room-temperature water for three hours, with all surfaces exposed.
3. After removal from the water, specimens are blotted dry, then air-dried for 18 hours at a 75°F ± 5°F (23.8°C ± 2.8°C) room temperature, with all surfaces exposed.

**3.5.4 Conditions of Acceptance:** There shall be no visible delamination or blistering of the facing layer. Additionally specimens must be subjected to the water resistance test described in Sections 3.1 and 3.2.

**4.0 SPECIAL REQUIREMENTS**

**4.1** For the IBC, IRC and UBC, a vapor retarder complying with Section 1405.3 of the 2009 IBC, Section 1403.2 of the 2006 IBC, Section R601.3 of the 2009 IRC or Section R318.1 of the 2006 IRC shall be installed on the warm-in-winter side of the wall.

**4.2** When the system has not been tested in accordance with Section 3.4 with penetrations and openings, the evaluation report on the foam plastic insulation shall require the foam plastic to be specifically recognized in a current ICC-ES evaluation report on a wall covering

**ACCEPTANCE CRITERIA FOR FOAM PLASTIC SHEATHING  
PANELS USED AS WATER-RESISTIVE BARRIERS (AC71)**

system. The evaluation report on the wall covering system shall provide flashing details specific to the foam plastic insulation, and the wall covering system incorporating the foam plastic insulation shall be tested in accordance with IBC Section 1403.2, Exception 2.

**5.0 QUALITY CONTROL**

**5.1 Joint-sealing Treatment:** Joint-sealing treatments are required to be manufactured under a quality control program documented in accordance with the ICC-ES Acceptance Criteria for Quality Documentation (AC10).

Follow-up inspections by an inspection agency are not required under this criteria.

**5.2 Foam Plastic:** All foam plastic boards shall be listed and labeled as set forth in Section 2603.2 of the IBC, Section R316.2 of the 2009 IRC, Section R314.2 of the 2006 IRC, or Section 2602.2 of the UBC. Compliance of foam plastic is based on a current applicable evaluation report, on the foam plastic, issued by ICC-ES; if no such report exists, foam plastic shall comply with the ICC-ES Acceptance Criteria for Foam Plastic Insulation (AC12).

## Attachment B: Product Materials

Dow Weathermate Tape, Weathermate Flashing Tape, and Foil Tapes

Link – <http://building.dow.com/na/en/products/specialty/accessories.htm>

Dupont Tyvek Tape and Straightflash

Link – [http://www2.dupont.com/Tyvek\\_Weatherization/en\\_US/products/residential/resi\\_accessories.html](http://www2.dupont.com/Tyvek_Weatherization/en_US/products/residential/resi_accessories.html)

Henry Blueskin Tape

Link – <http://henry.com/airandvapor/nonpermeable/blueskinWB>

Typar Tape

Link – <http://typar.com/homeowner/products/accessories/>

Tuck Tape

Link – <http://www.cttgroup.com/cantech/en/details/135/>

## References

Building Science Digest - 013: Rain Control in Buildings, Building Science Corporation, 2006, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

Building Science Digest - 105: Understanding Drainage Planes, Building Science Corporation, 2006, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

Building Science Digest - 144: Increasing the Durability of Building Constructions, Building Science Corporation, 2006, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

Building Science Corporation. (2007) “Water Management Details for Residential Buildings.” Building Science Corporation, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

Building Science Guides and Manuals: Water Management Details for Residential Buildings – Housewraps/Flashings/Windows, Building Science Corporation, 2007, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

Building Science Information Sheet - 303: Common Flashing Details, Building Science Corporation, 2009, [www.buildingscience.com](http://www.buildingscience.com), accessed July 2012

ICBO Evaluation Service, Inc. (2001) “Acceptance Criteria for Flashing Materials” AC148, Whittier, CA.

ICC Evaluation Service, Inc. (2003) “Interim Criteria for Foam Plastic Sheathing Panels Used As Weather-Resistive Barriers” AC71, Whittier, CA.

Lstiburek, J.W. (January 2010). “Building Sciences: Mind the Gap, Eh?.” ASHRAE Journal (vol. 52); pp. 57-63.

Lstiburek, Joseph. (2006) Water Management Guide. Building Science Press: Westford, MA.

## Appendix A – Homebuilder Interviews

Six homebuilders were interviewed who represent the experience of building over 27,000 homes in 2011. Builders were asked the following questions and BSC facilitated the discussions that followed. The findings were the basis for the Best Practices and Construction Details sections within the measure guideline.

- Do you use taped insulating sheathing as the drainage plane?
- Do you build your walls with two drainage planes or one?
- What materials have you used as your drainage planes?
- How long have you been using taped drainage planes?
- Have you had call backs related to failures? If yes, what did you find? If no, have you ever removed siding to see if it is still sticking?
- How come you have never used taped sheathing?
- Do you want to learn how to use taped insulating sheathing?
- Have you ever had issues with tape sticking to sheathing?
- What do you do to make tape stick to insulating sheathing?
- What tapes do you use?
- Have you ever switched manufacturers?
- Is there a manufacturer that you prefer?
- Do you always pair the insulating sheathing with the tape made for that sheathing?
- What insulating sheathing manufacturers do you use?
- Have you ever used self-adhered self-sealing membrane materials?
- Do you use termination mastics or tapes?
- What widths of tapes have you tried?
- Have you ever tried flashing the joints of the insulating sheathing?
- Do you integrate sub sill flashings for all openings?

*buildingamerica.gov*

U.S. DEPARTMENT OF  
**ENERGY** | Energy Efficiency &  
Renewable Energy

DOE/GO- KNDJ-1-40337-02 ▪ October, 2012

Printed with a renewable-source ink on paper containing at least 50% wastepaper, including 10% post-consumer waste.

## About the Authors

**Joseph Lstiburek**, Ph.D., P.Eng., is a principal of Building Science Corporation in Somerville, Massachusetts. Joe is an ASHRAE Fellow and an internationally recognized authority on indoor air quality, moisture, and condensation in buildings. More information about Joseph Lstiburek can be found at [www.joelstiburek.com](http://www.joelstiburek.com).

**Aaron Grin** is a building scientist and researcher with a background in structural Civil Engineering. More information about Aaron Grin can be found at [www.buildingscienceconsulting.com](http://www.buildingscienceconsulting.com)

Direct all correspondence to: Building Science Corporation, 30 Forest Street, Somerville, MA 02143.

## Limits of Liability and Disclaimer of Warranty:

Building Science documents are intended for professionals. The author and the publisher of this article have used their best efforts to provide accurate and authoritative information in regard to the subject matter covered. The author and publisher make no warranty of any kind, expressed or implied, with regard to the information contained in this article.

The information presented in this article must be used with care by professionals who understand the implications of what they are doing. If professional advice or other expert assistance is required, the services of a competent professional shall be sought. The author and publisher shall not be liable in the event of incidental or consequential damages in connection with, or arising from, the use of the information contained within this Building Science document.