#### Joseph Lstiburek, Ph.D., P.Eng, ASHRAE Fellow

# Building Science

## Adventures In Building Science

www.buildingscience.com

#### What is a Building?

### A Building is an Environmental Separator

- Control heat flow
- Control airflow
- Control water vapor flow
- Control rain
- Control ground water
- Control light and solar radiation
- Control noise and vibrations
- Control contaminants, environmental hazards and odors
- Control insects, rodents and vermin
- Control fire
- Provide strength and rigidity
- Be durable
- Be aesthetically pleasing
- Be economical

#### Arrhenius Equation

# For Every 10 Degree K Rise Reaction Rate Doubles


 $k = A e^{-E_a/(RT)}$ 


Damage Functions Water Heat Ultra-violet Radiation


### 2<sup>nd</sup> Law of Thermodynamics


Heat Flow Is From Warm To Cold Moisture Flow Is From Warm To Cold Moisture Flow Is From More To Less Air Flow Is From A Higher Pressure to a Lower Pressure Gravity Acts Down

#### **Thermodynamic Potential**

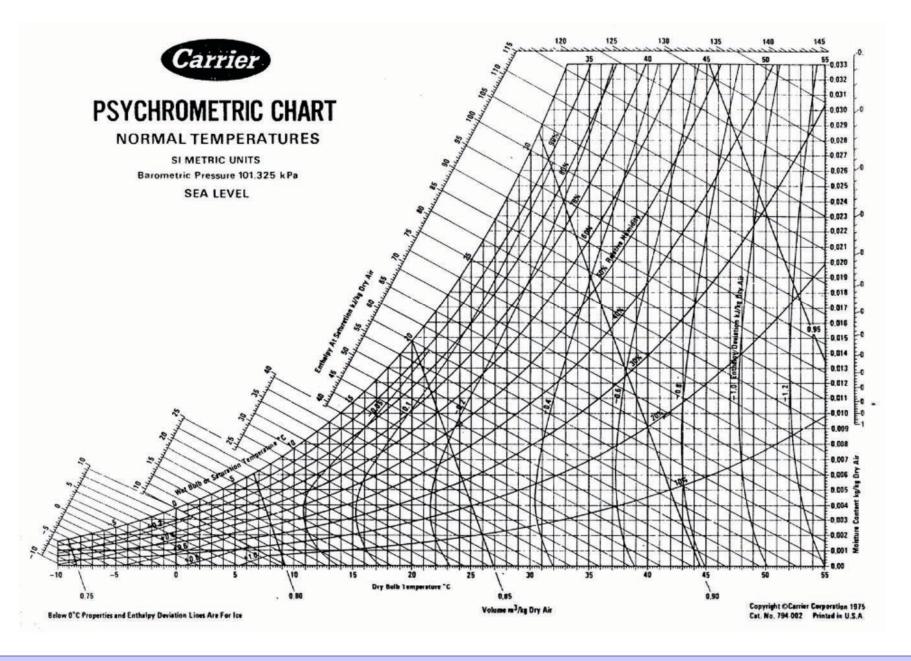


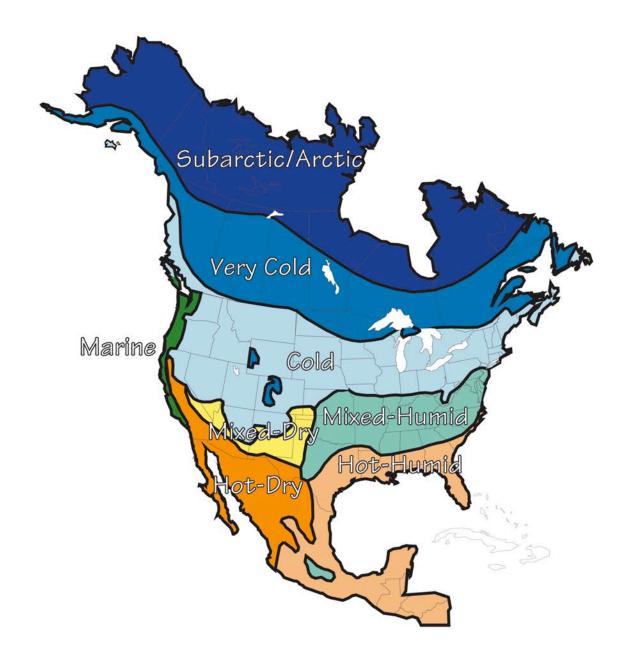


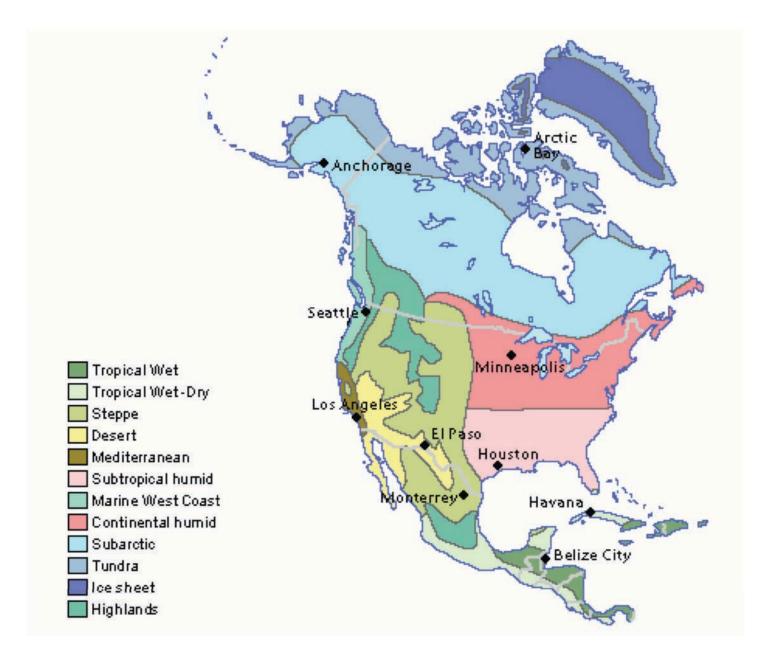


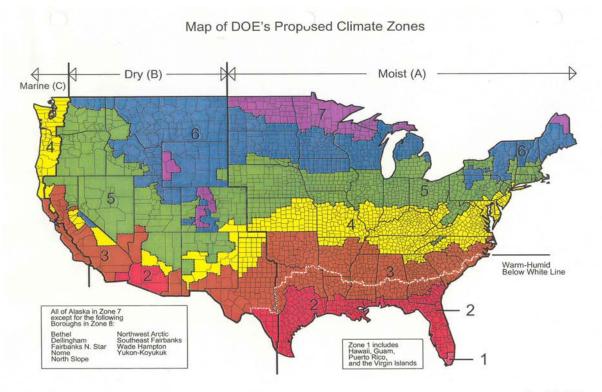


March 24, 2003

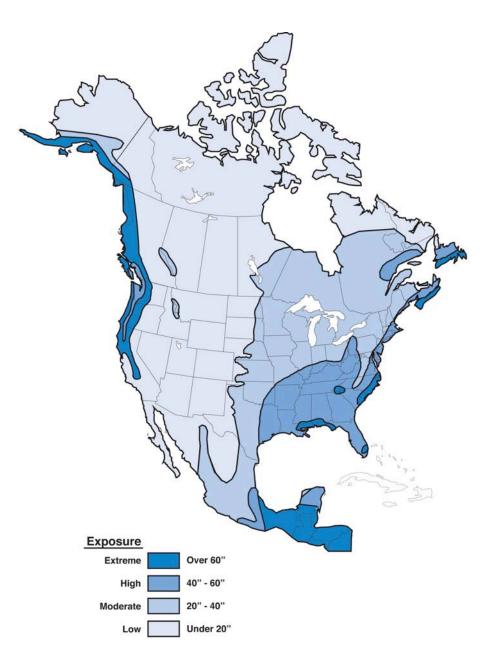


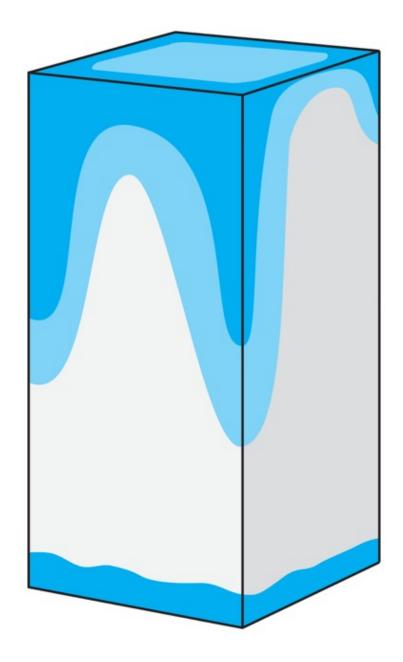


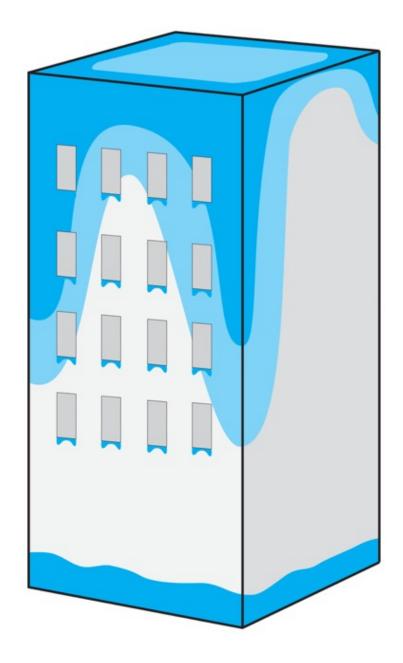



Water Control Layer Air Control Layer Vapor Control Layer Thermal Control Layer

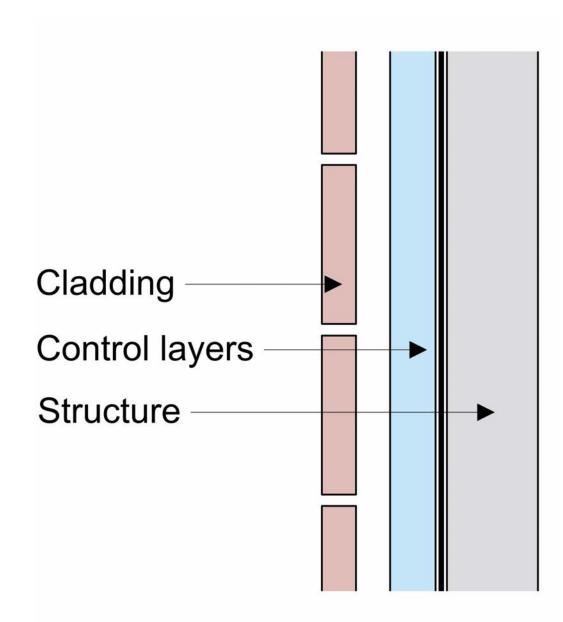


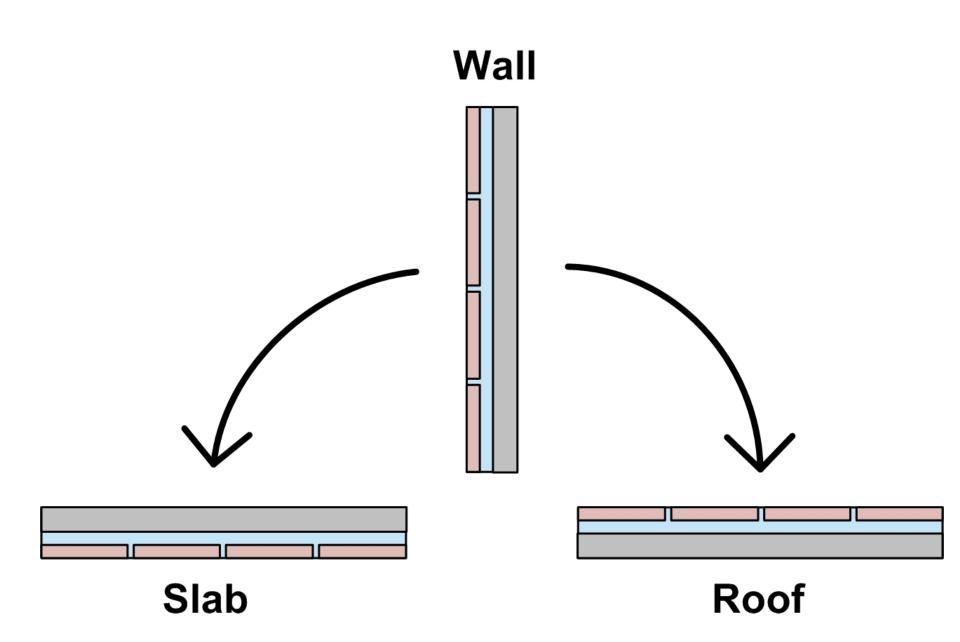


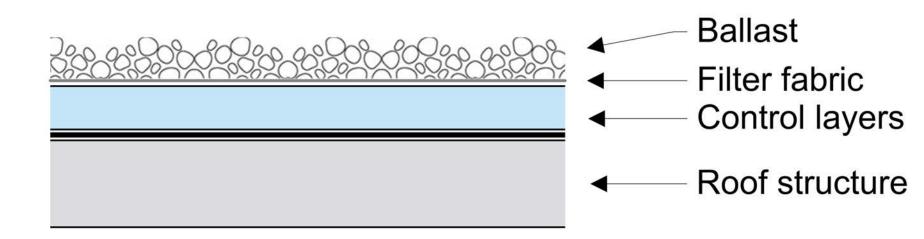


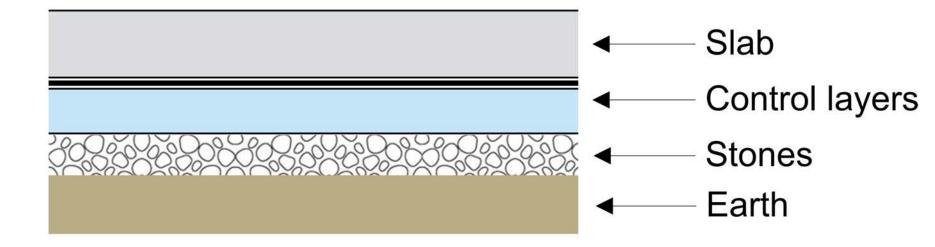


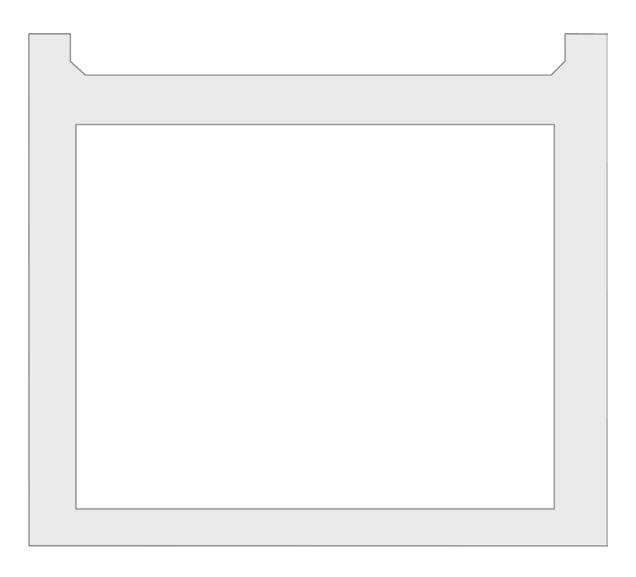


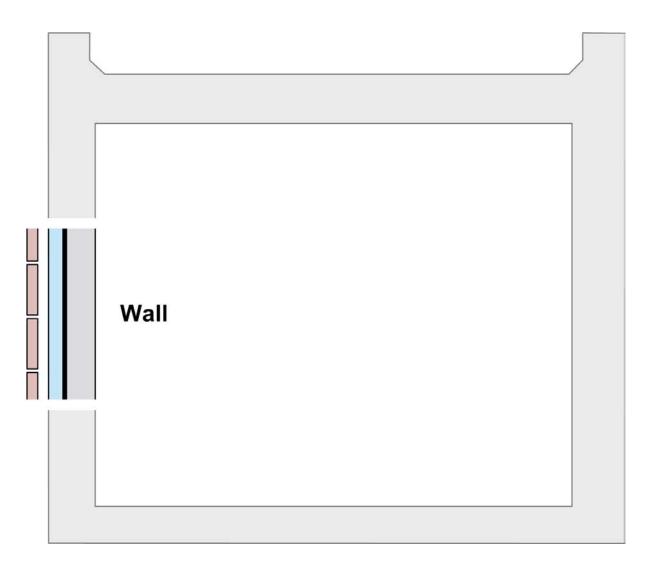


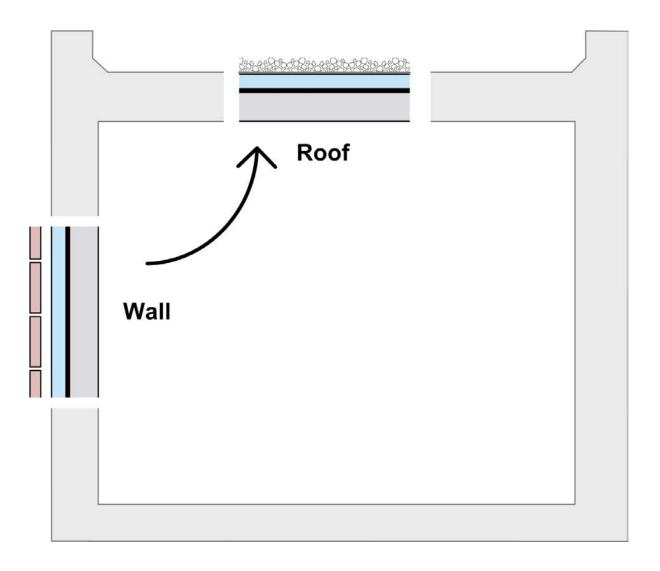


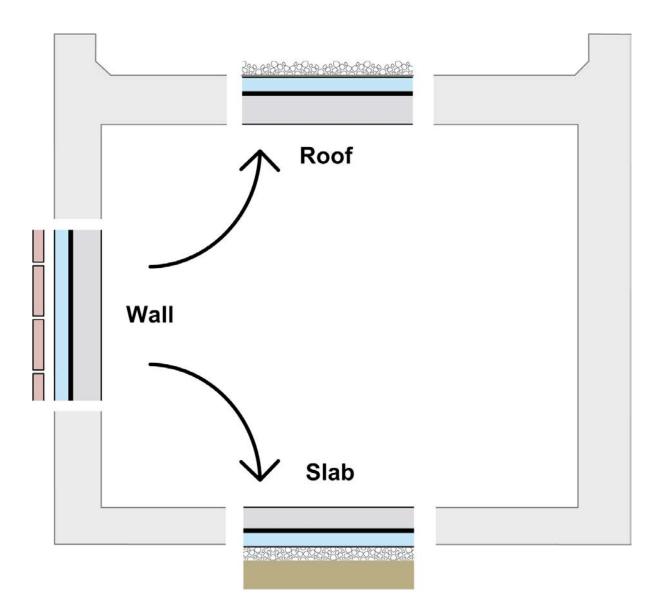


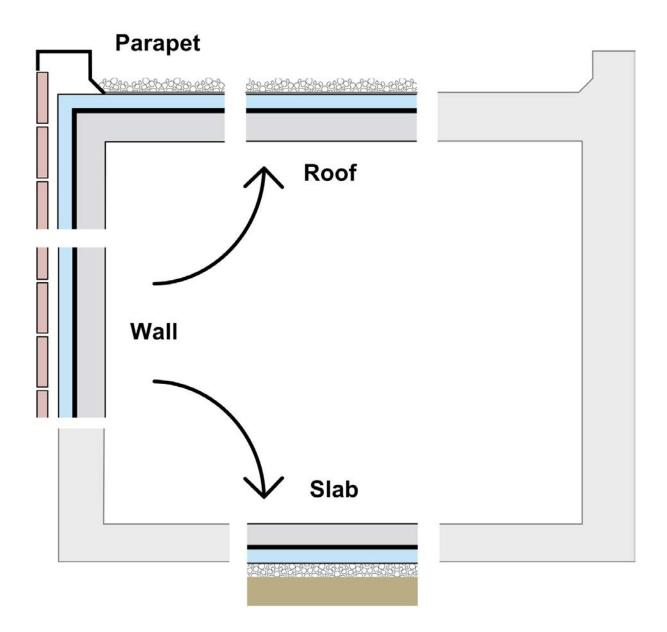


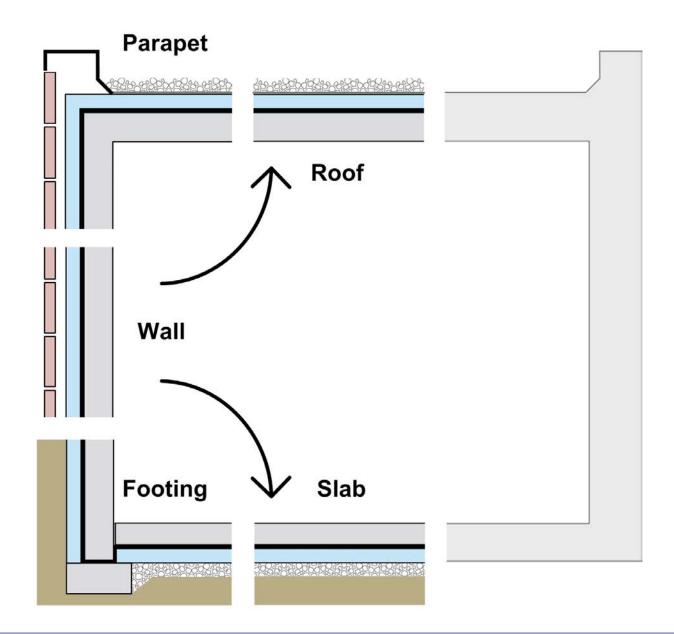


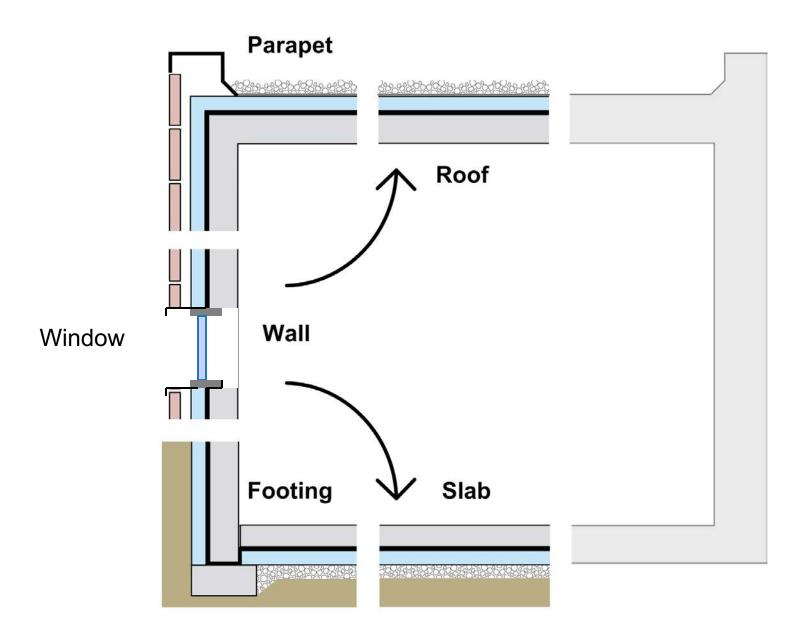


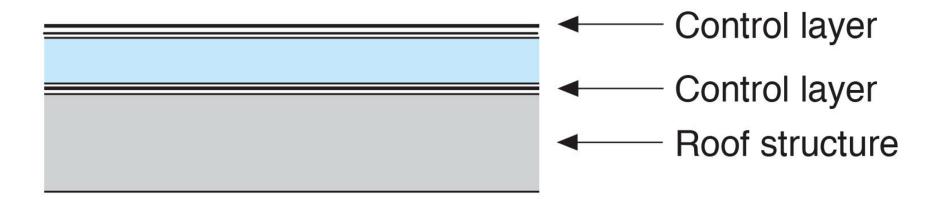


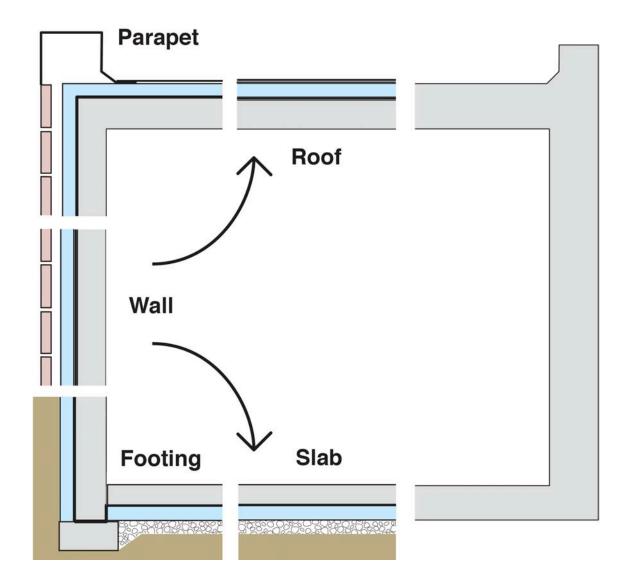

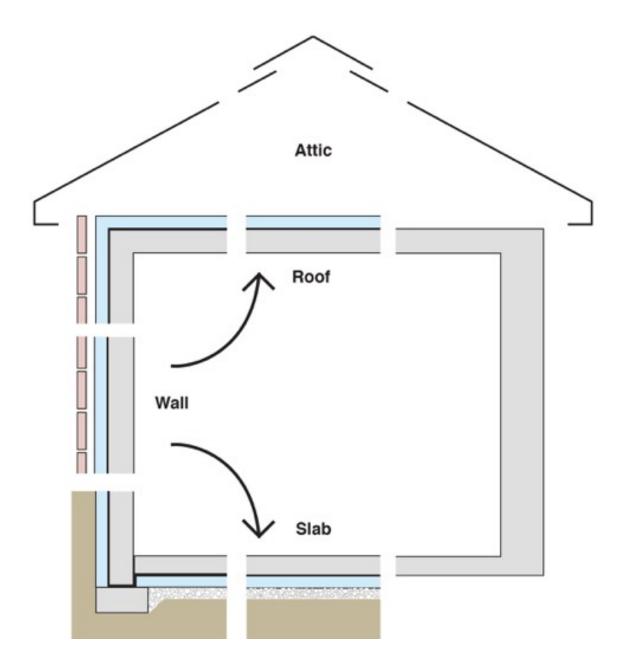


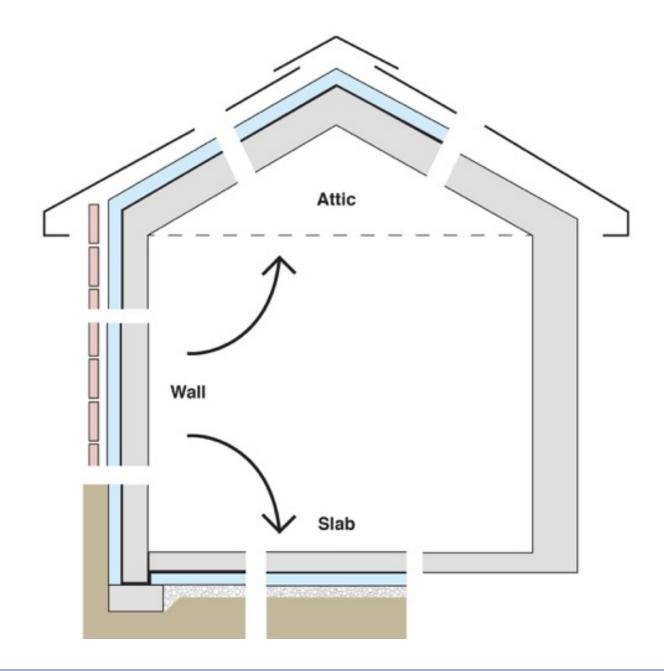


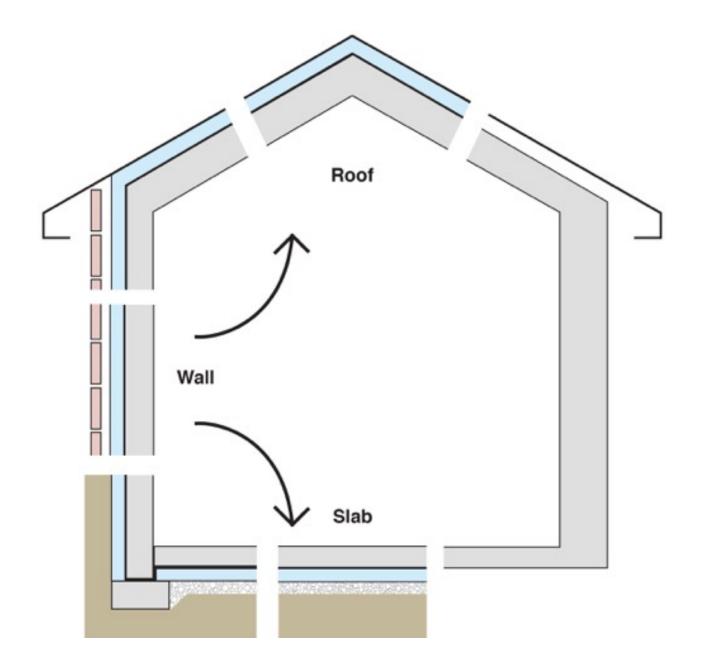


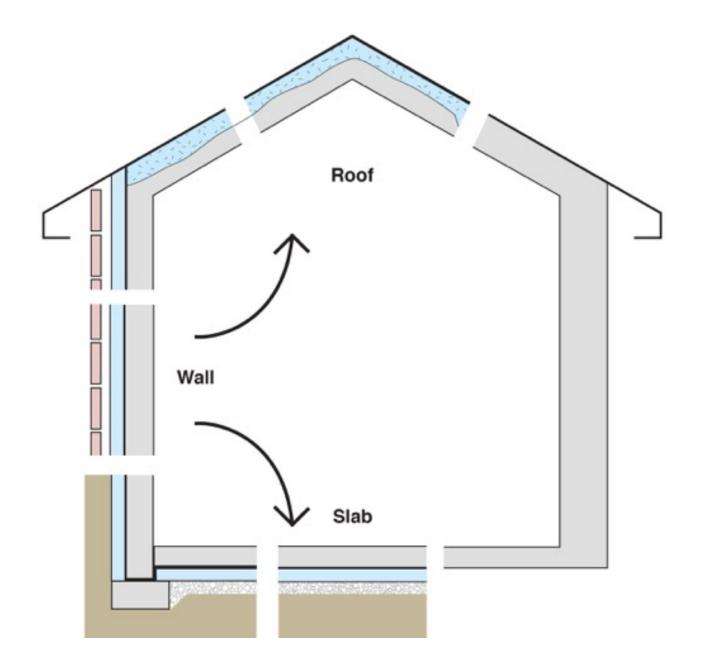


#### Configurations of the Perfect Wall

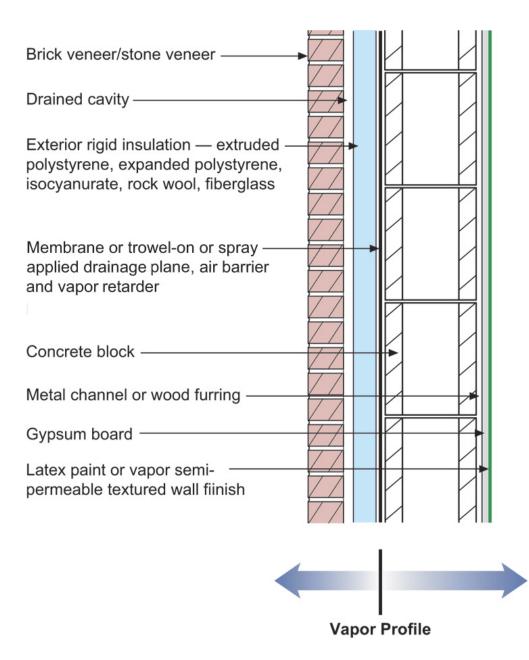

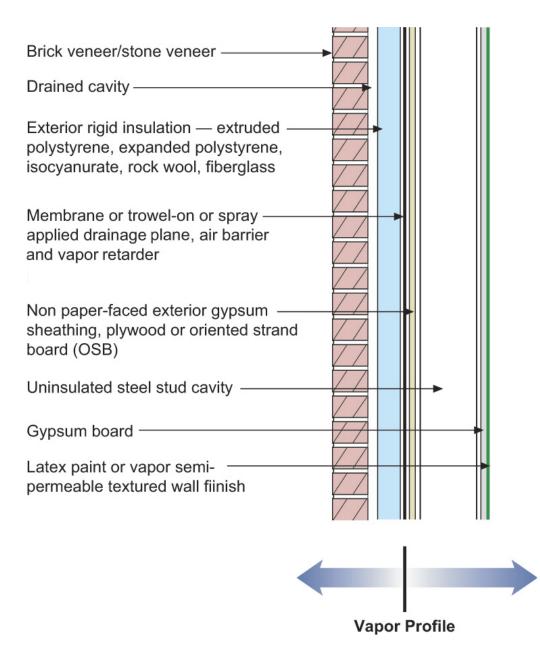


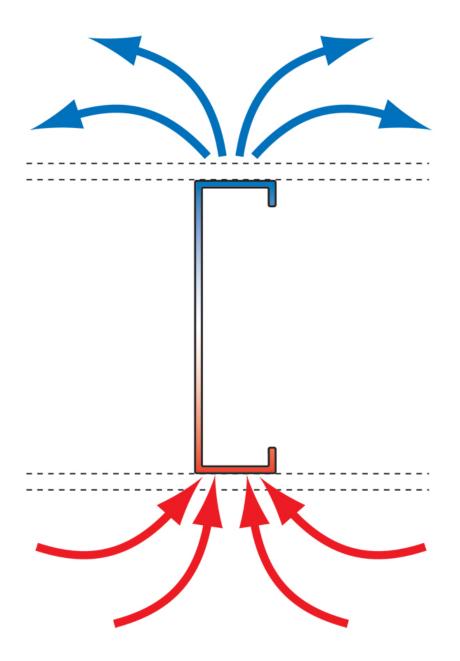




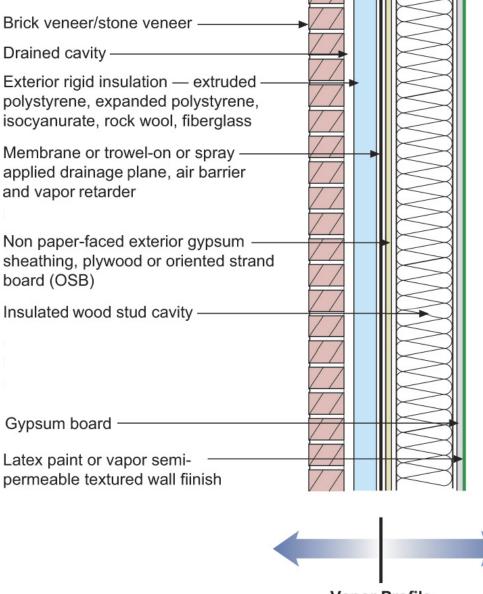


## Commercial Enclosure: Simple Layers

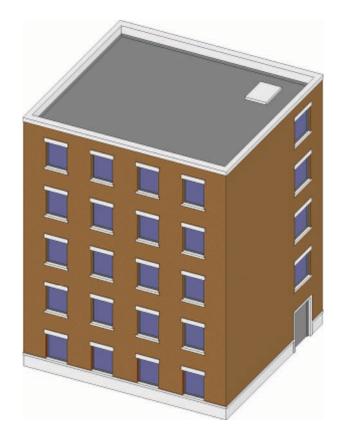

- Structure
- Rain/Air/Vapor
- Insulation
- Finish

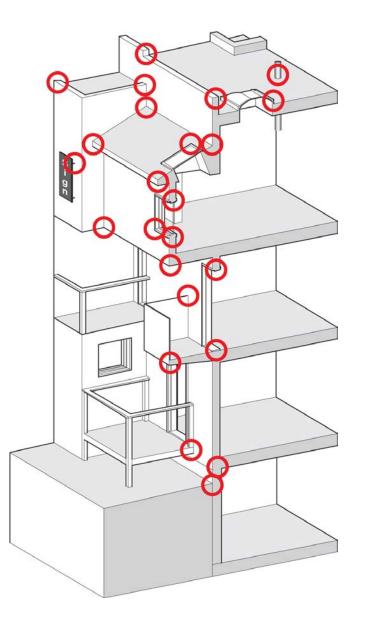

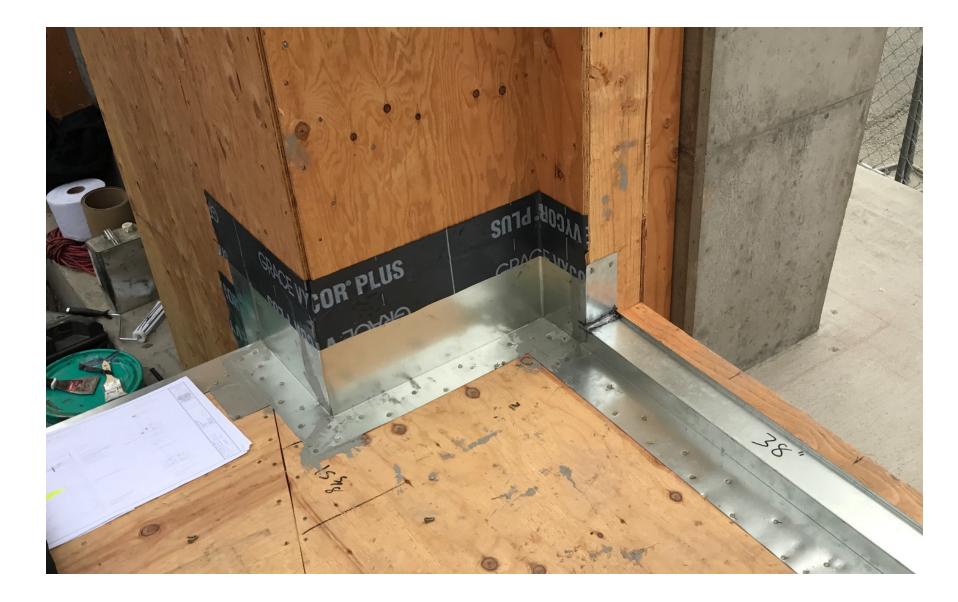





















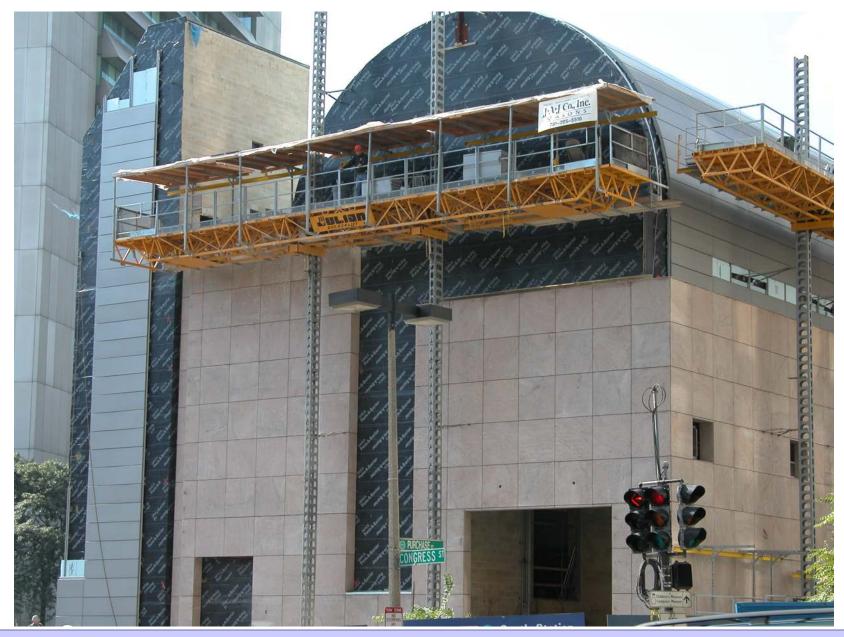

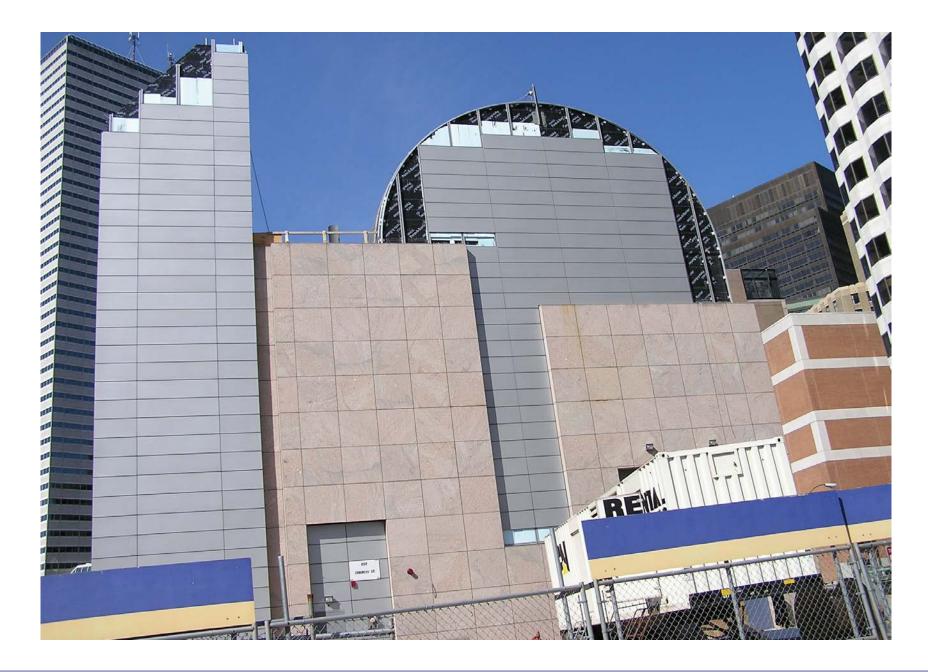














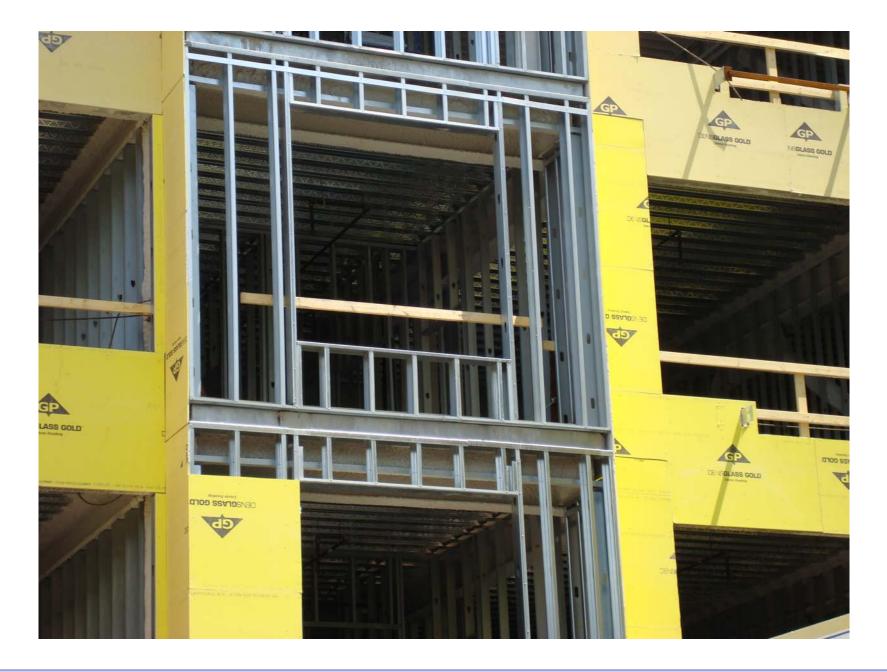





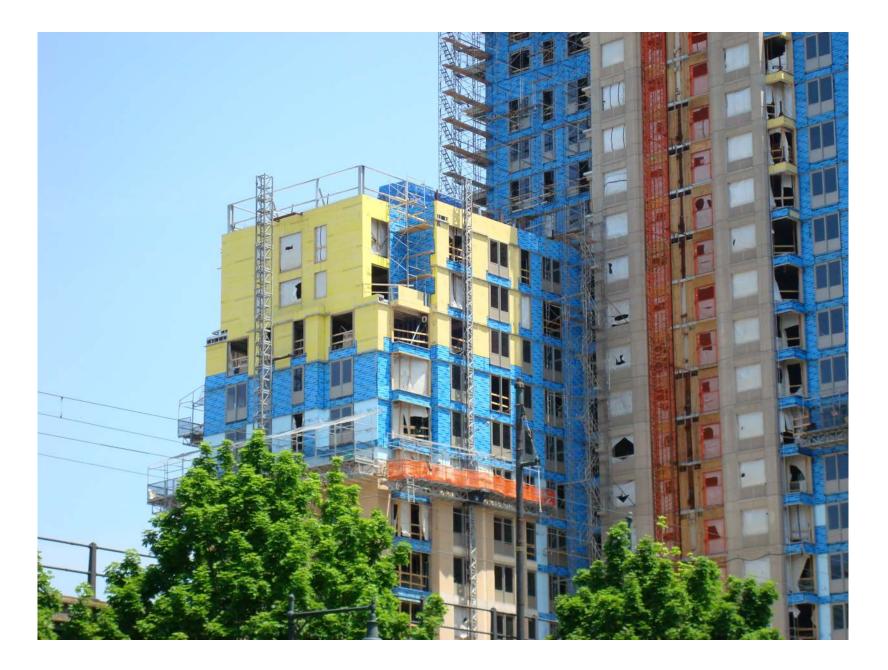

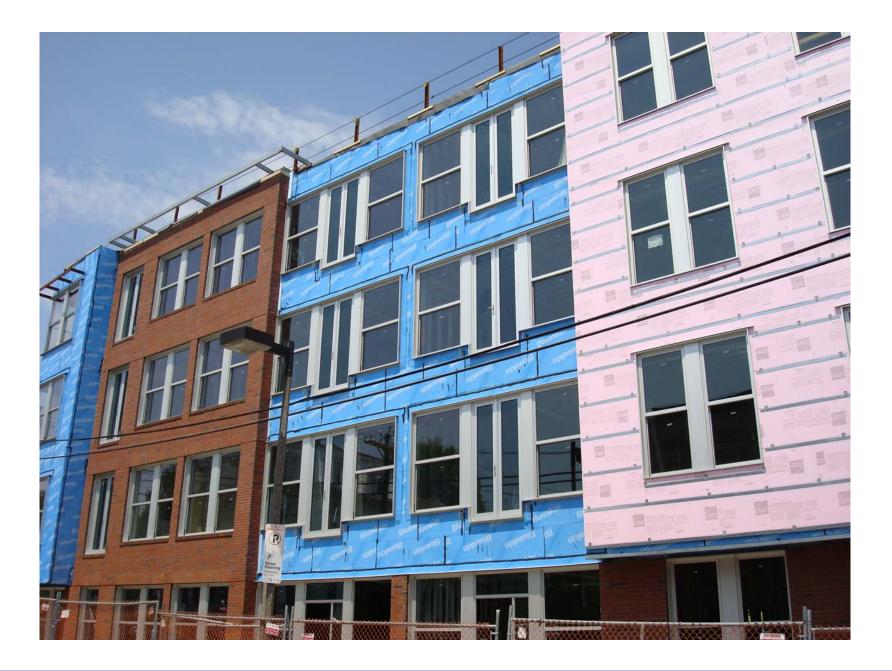



Building Science
















Building Science Corporation





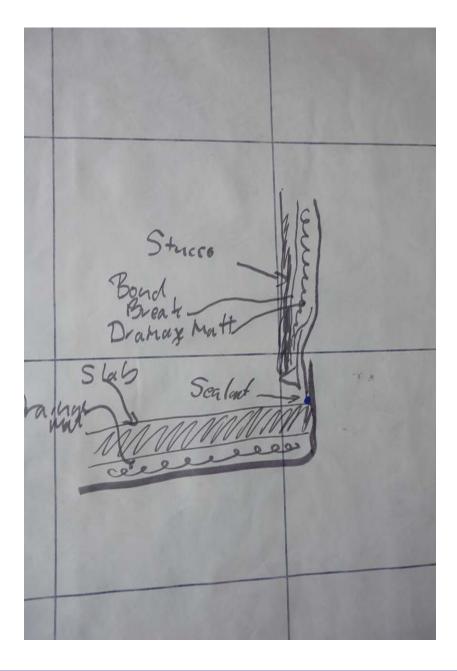

























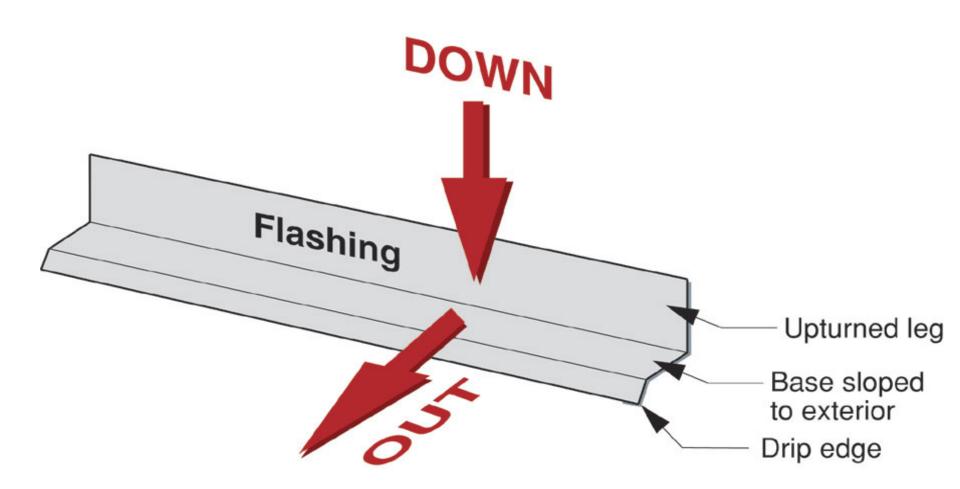


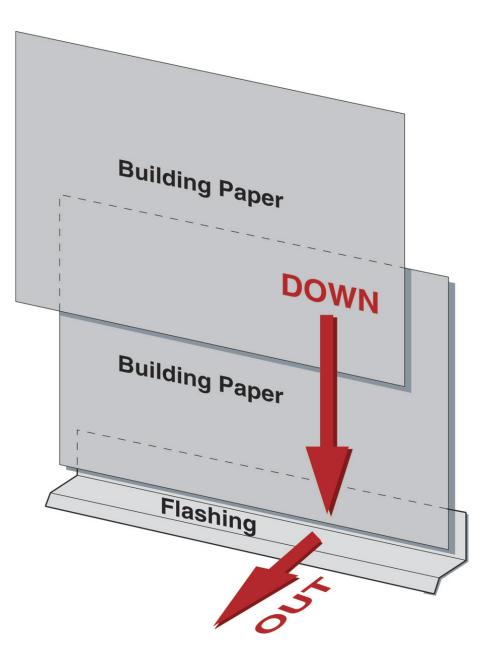


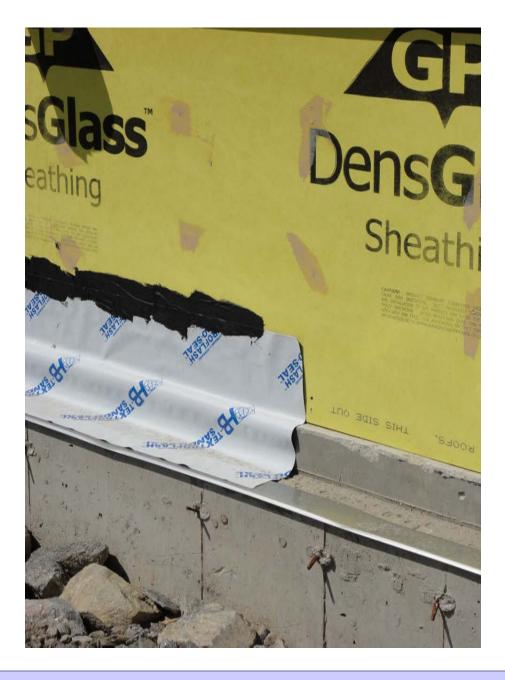





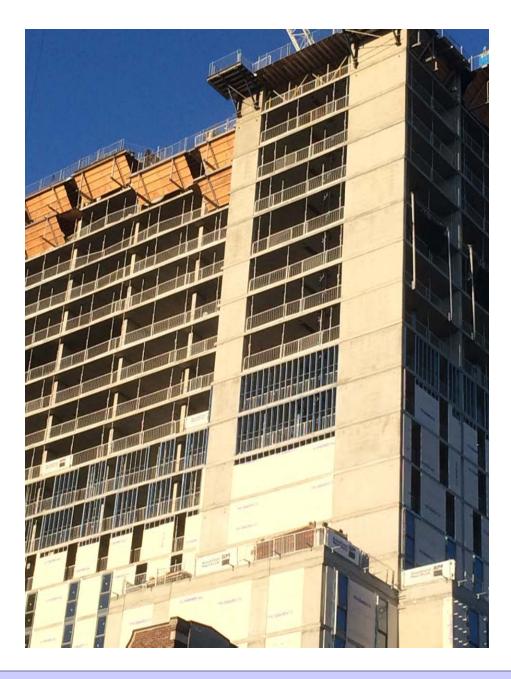


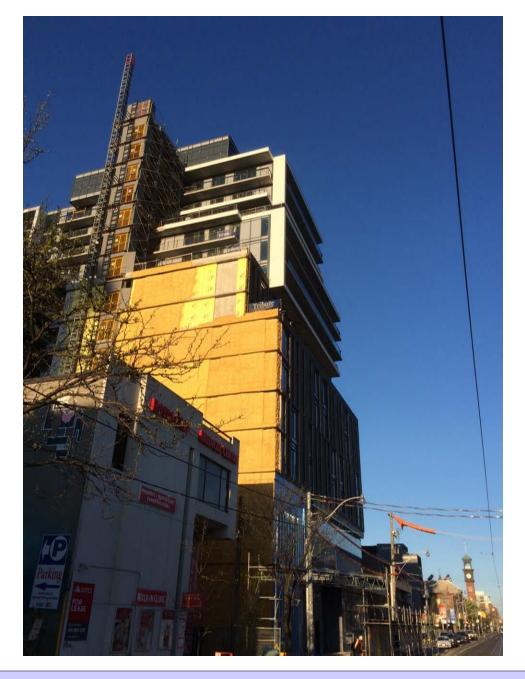


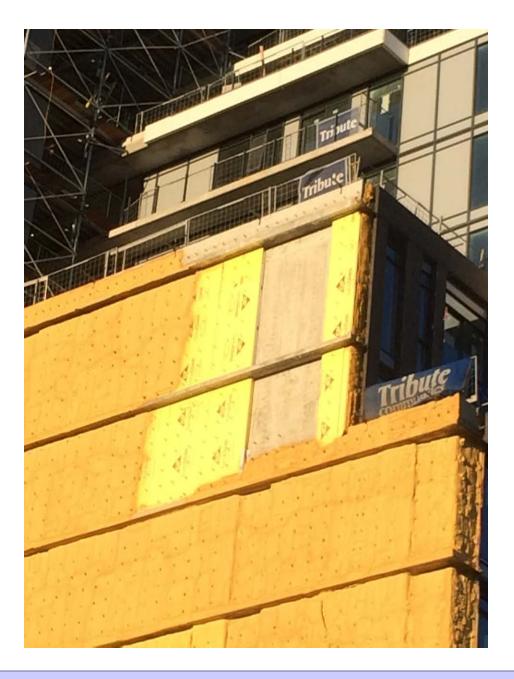


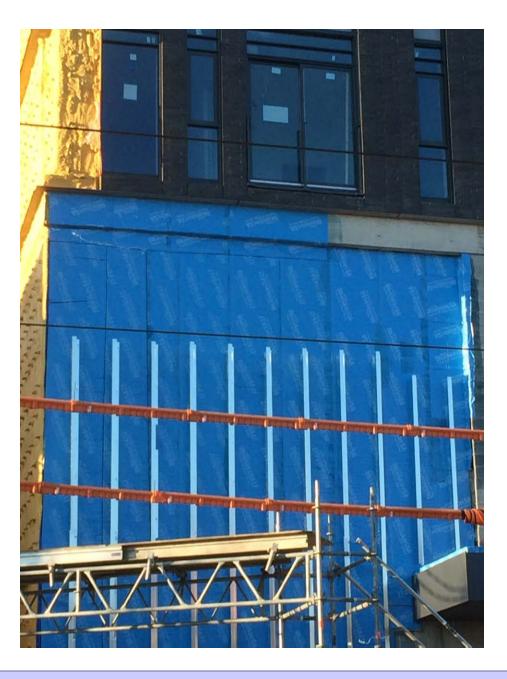


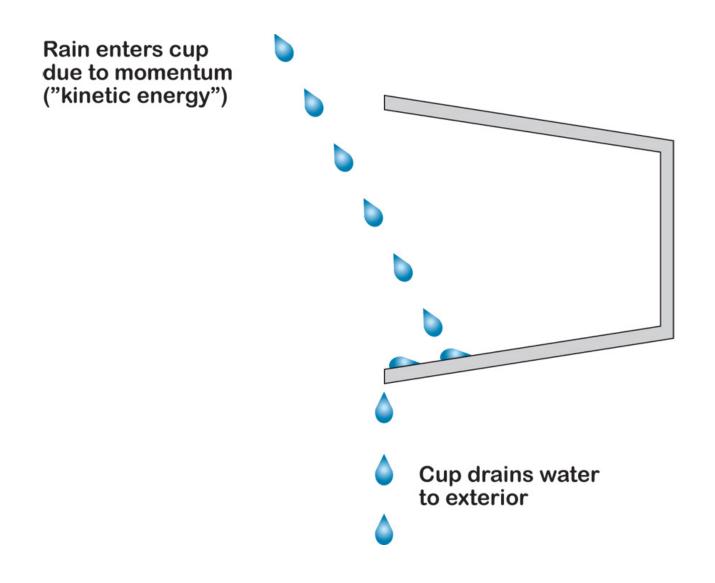


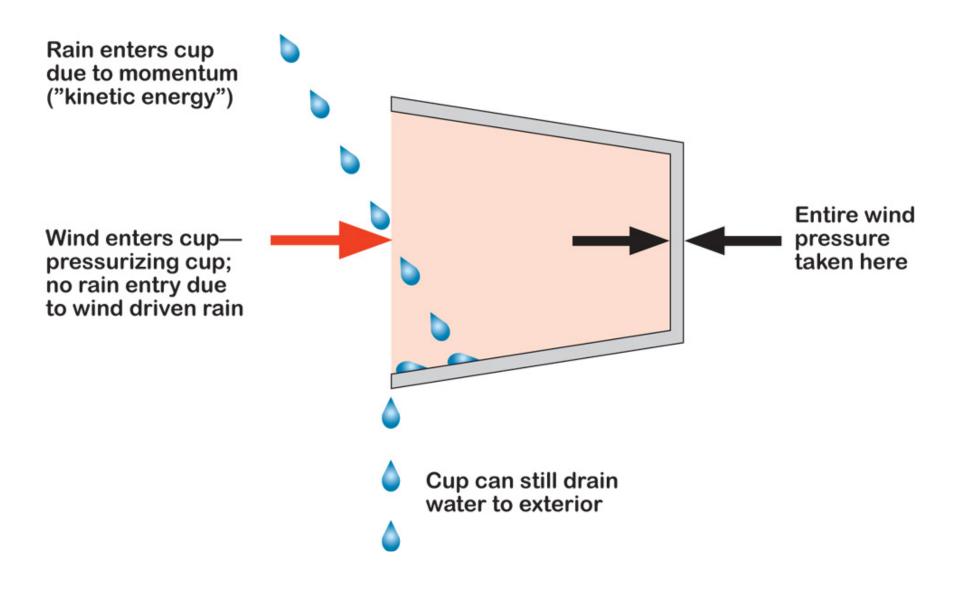

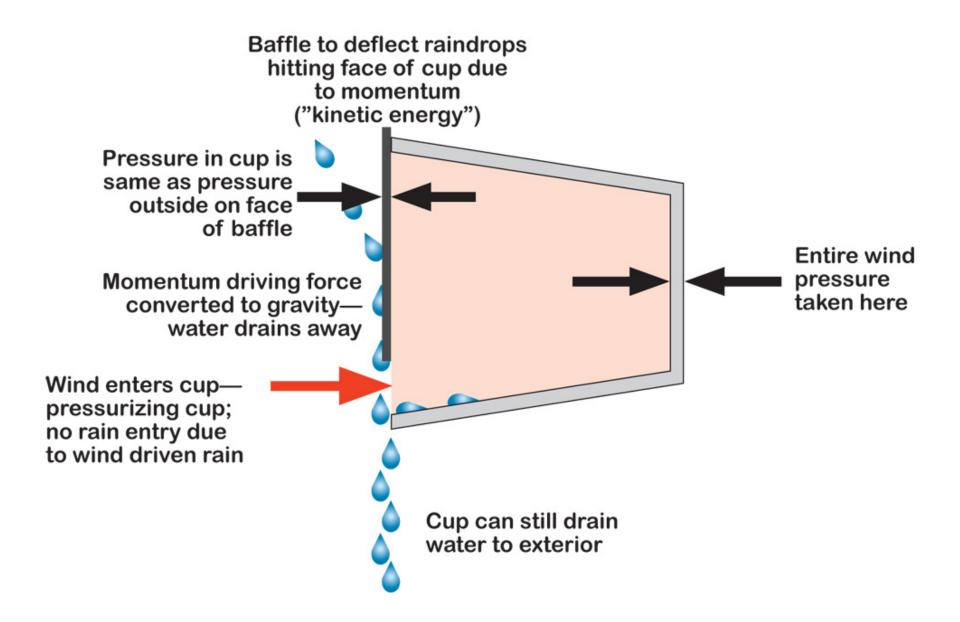

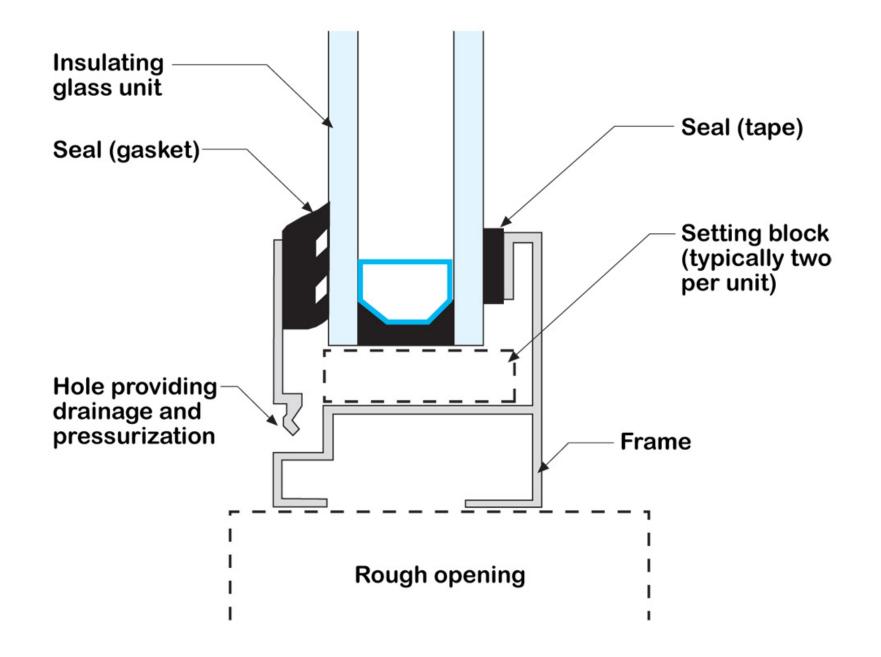

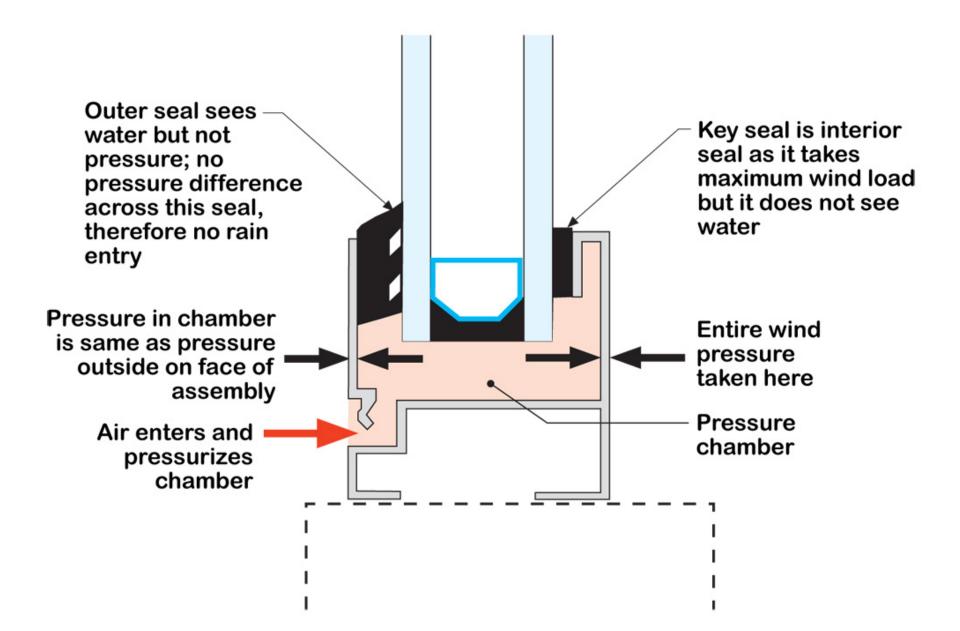

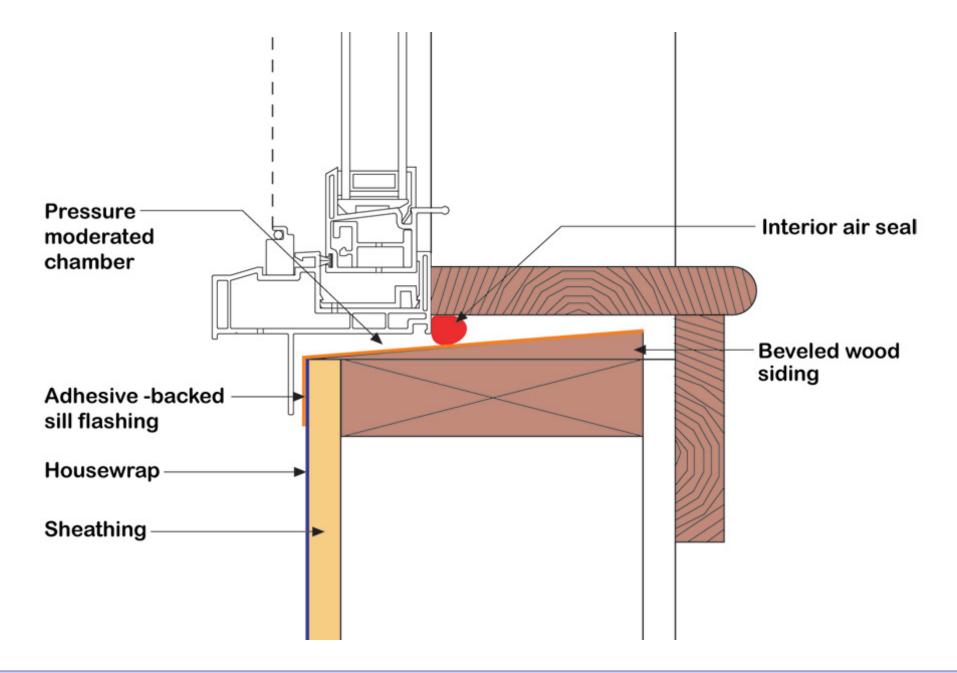
















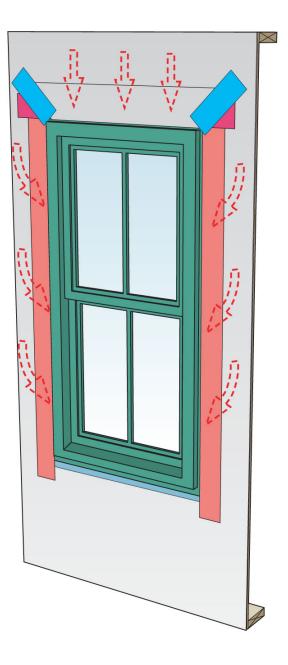


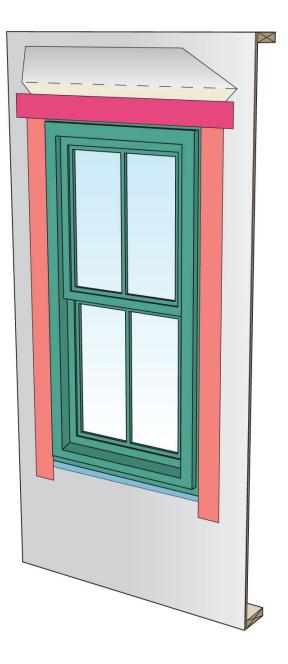


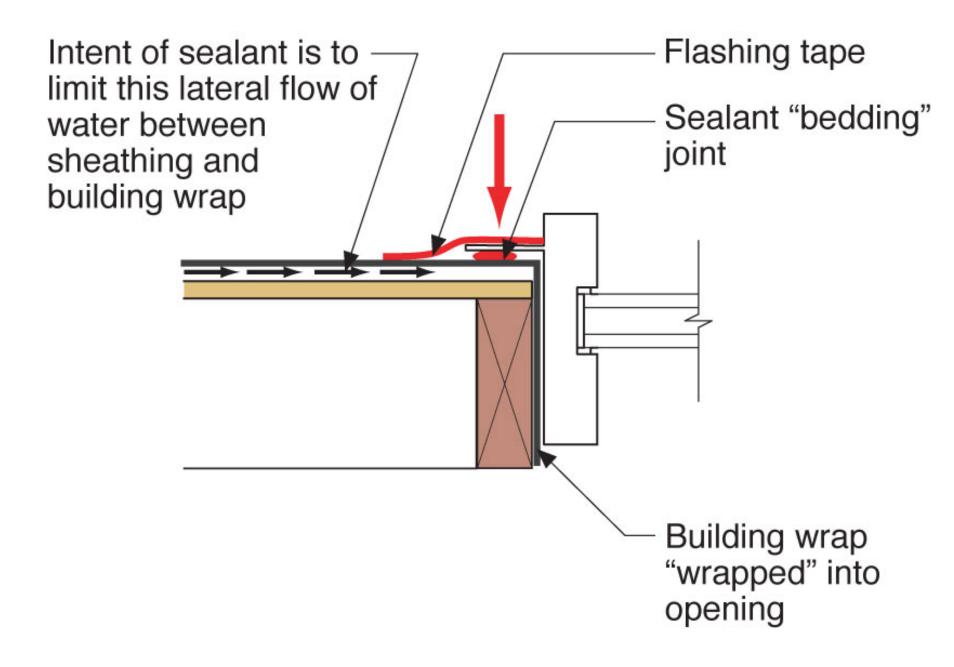


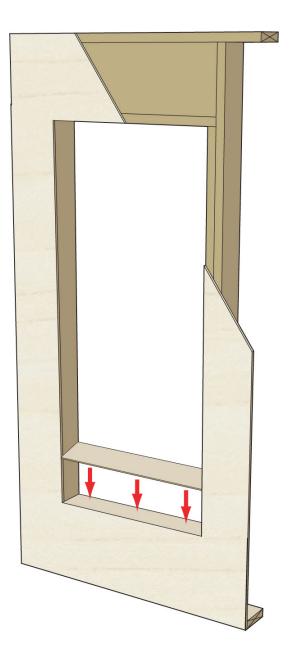


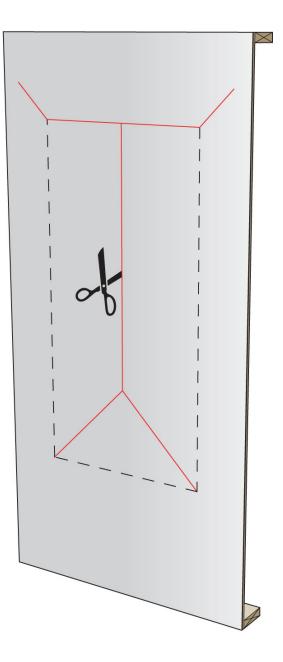


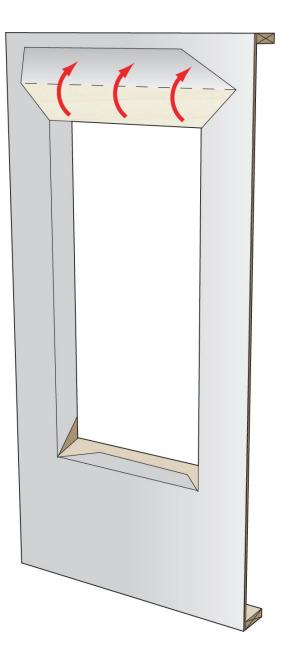


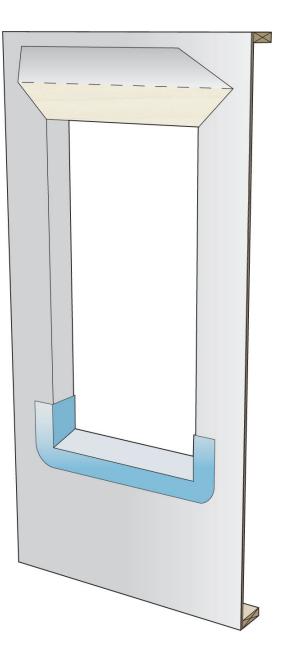

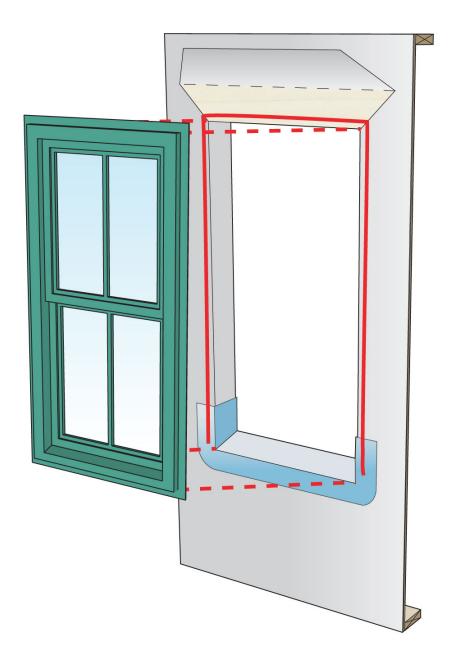

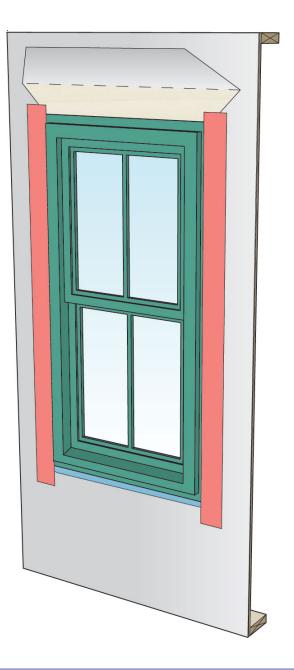

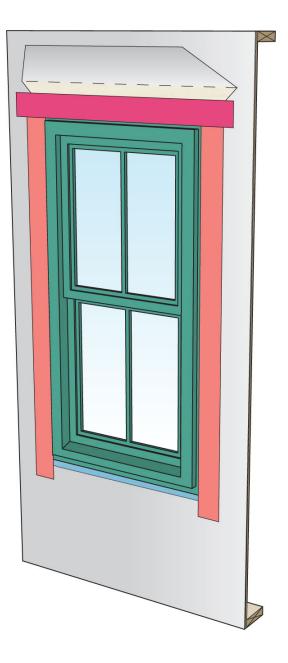

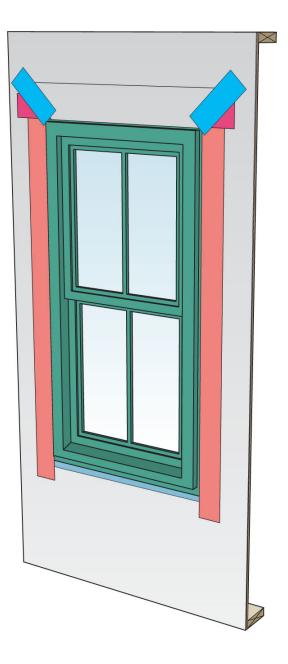














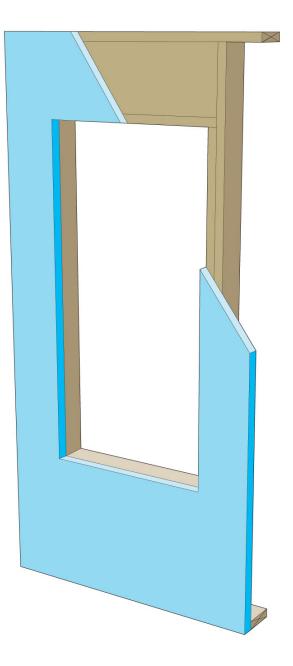


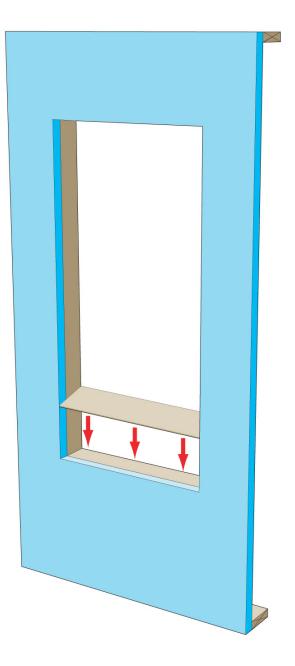


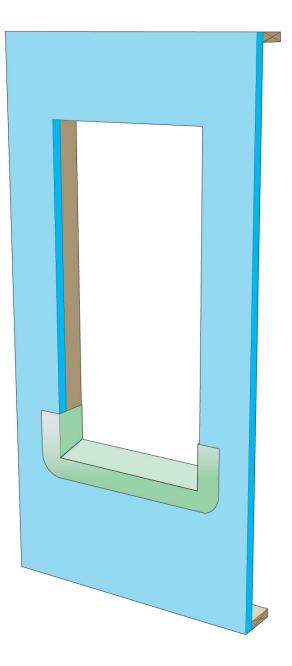


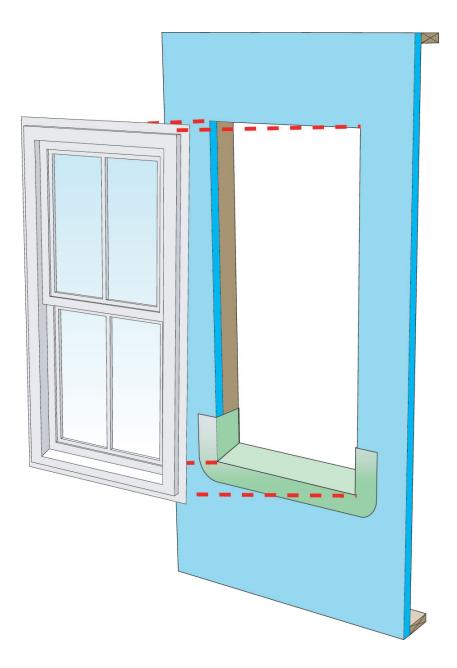

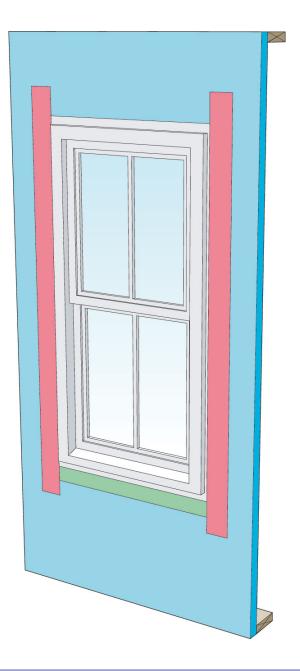

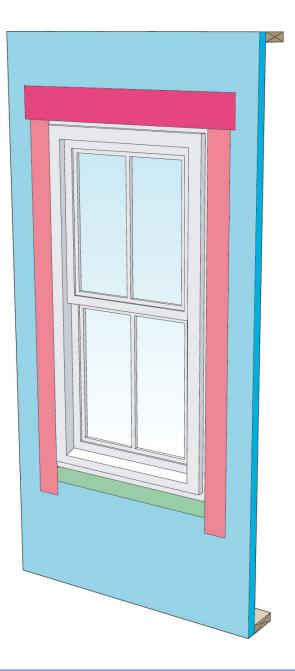

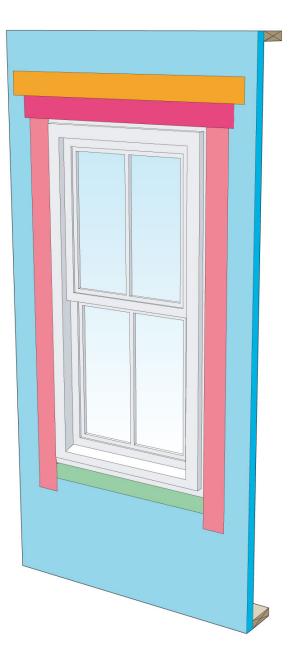


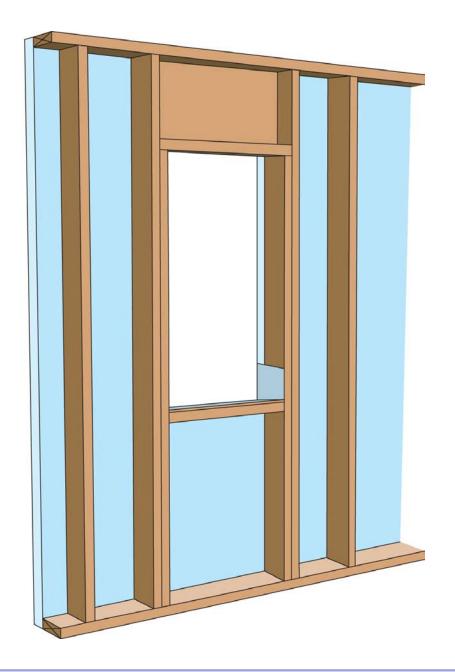











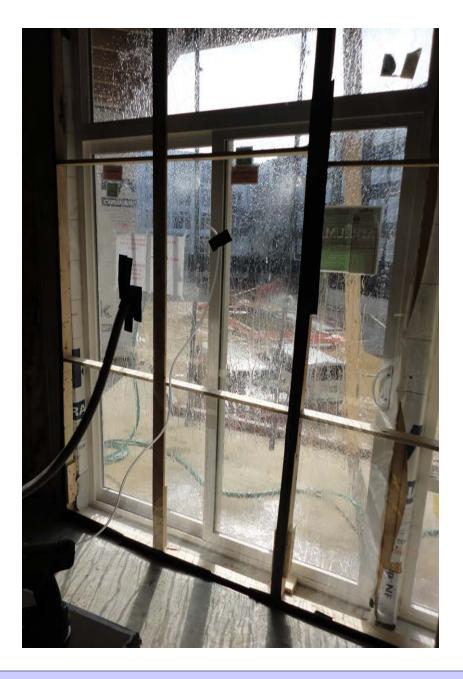

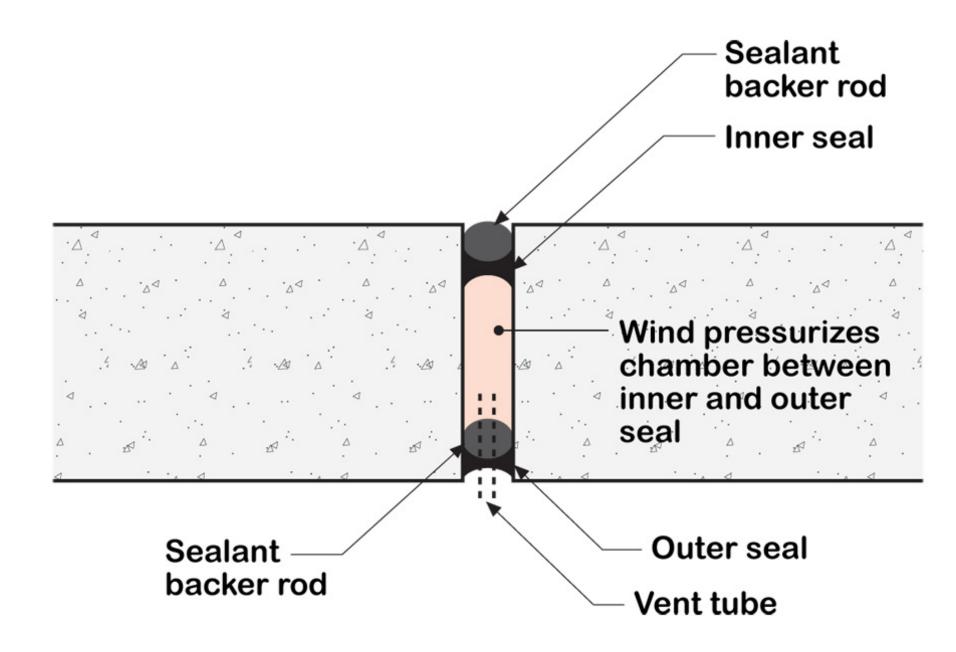

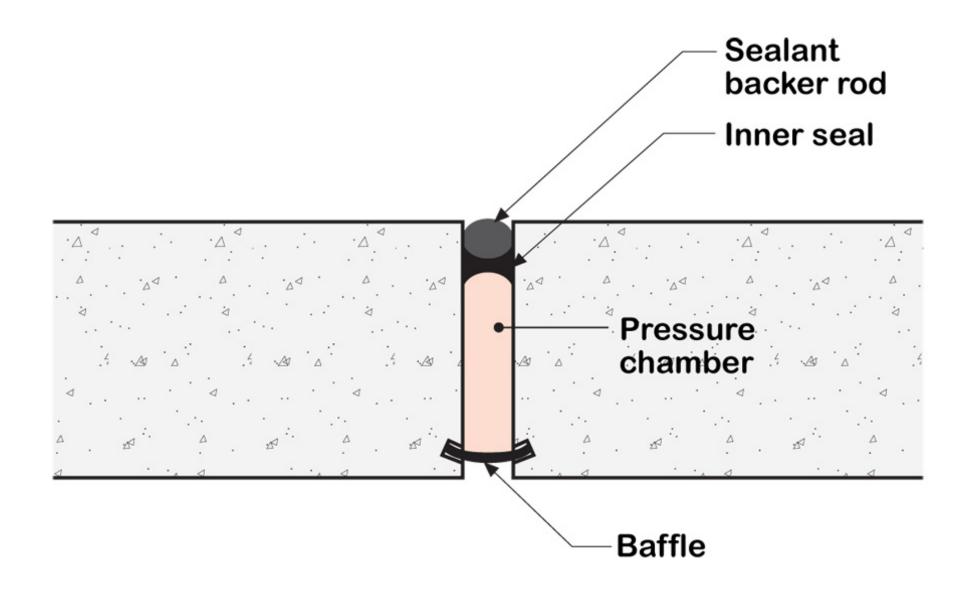

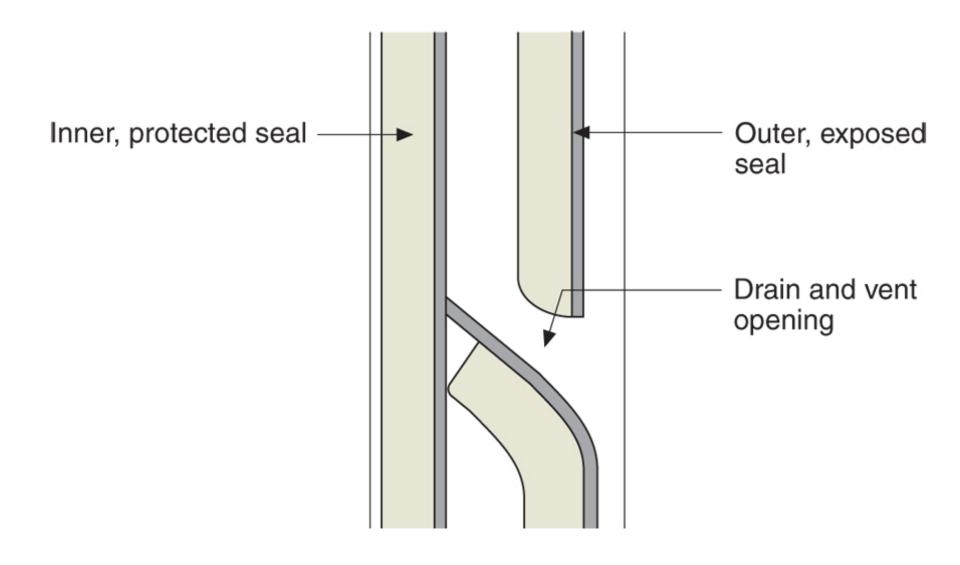

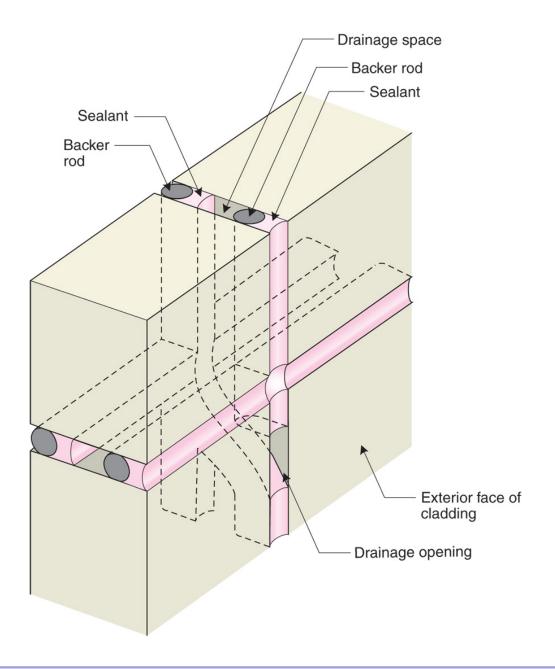







Building Science Corporation




Building Science Corporation

## Life is Tough Enough As it Is...

## Life is Tough Enough As it Is... It's Harder When You Are Stupid

## Don't Do Stupid Things




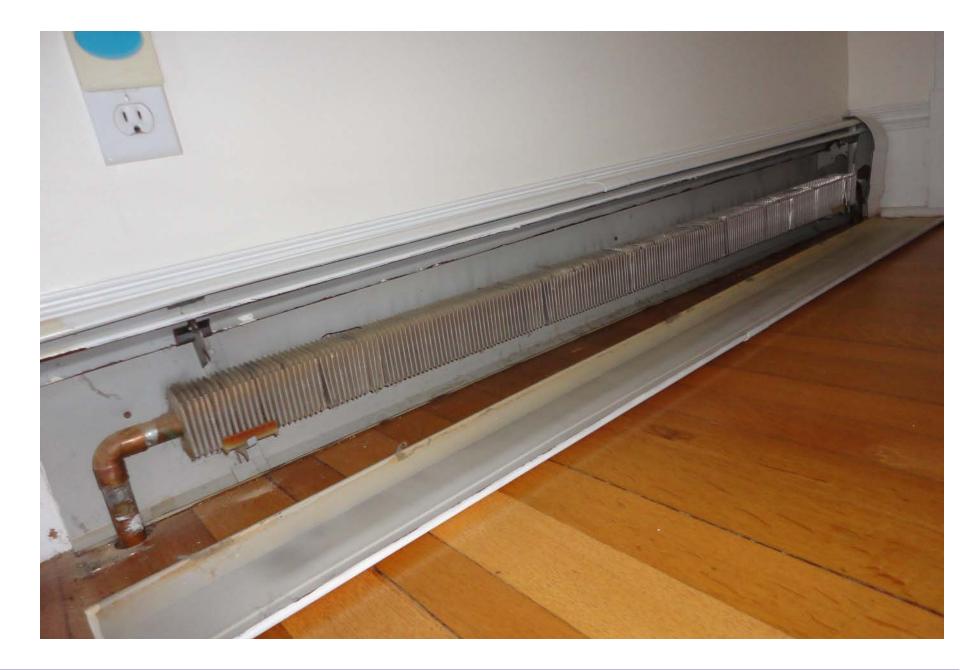









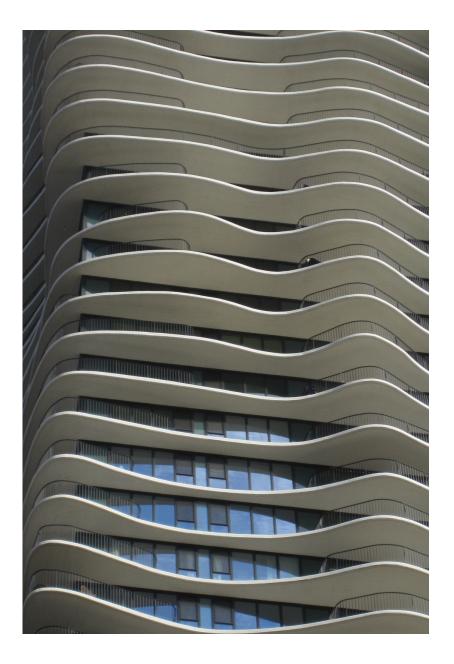

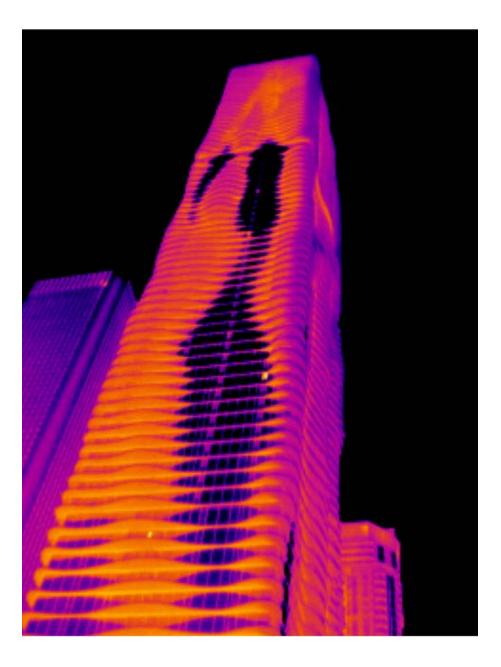


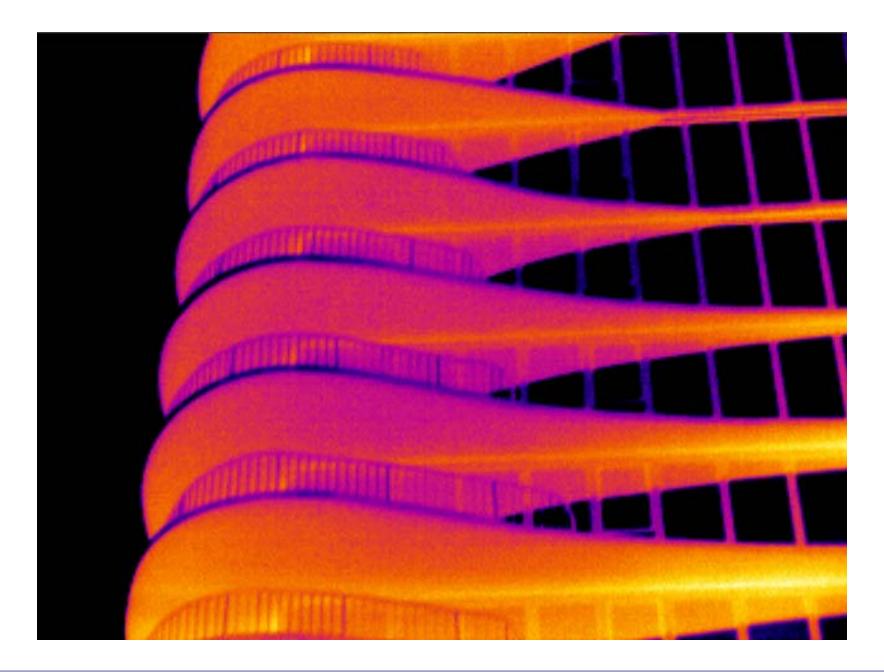


Building Science Corporation





Building Science Corporation

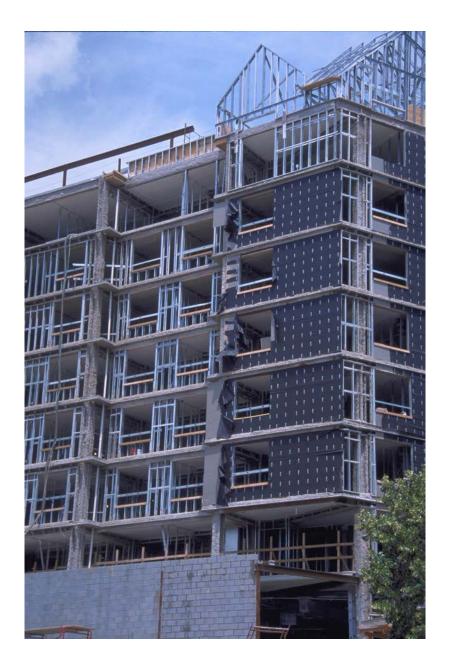




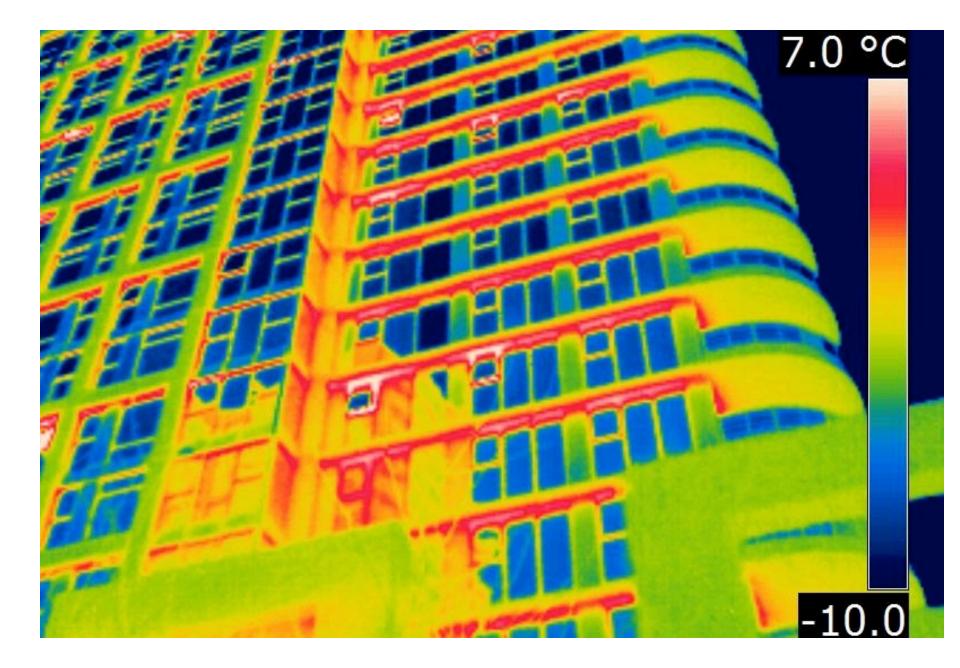

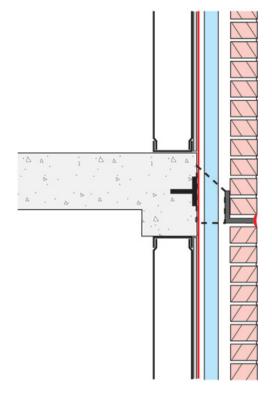

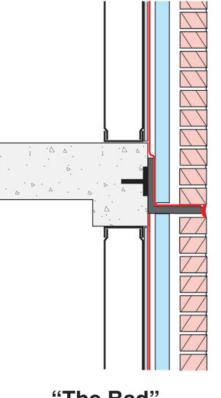


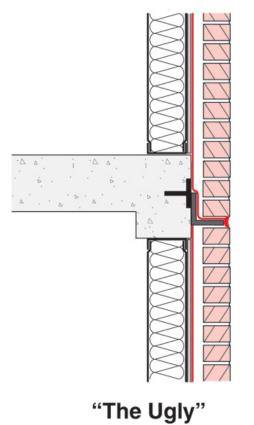





"The Bad"




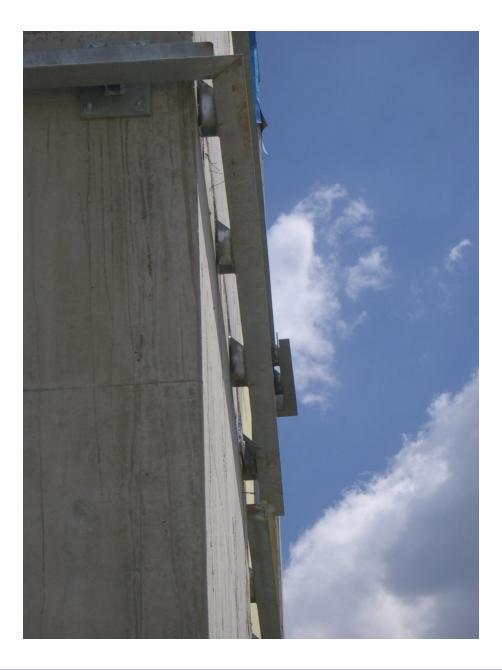




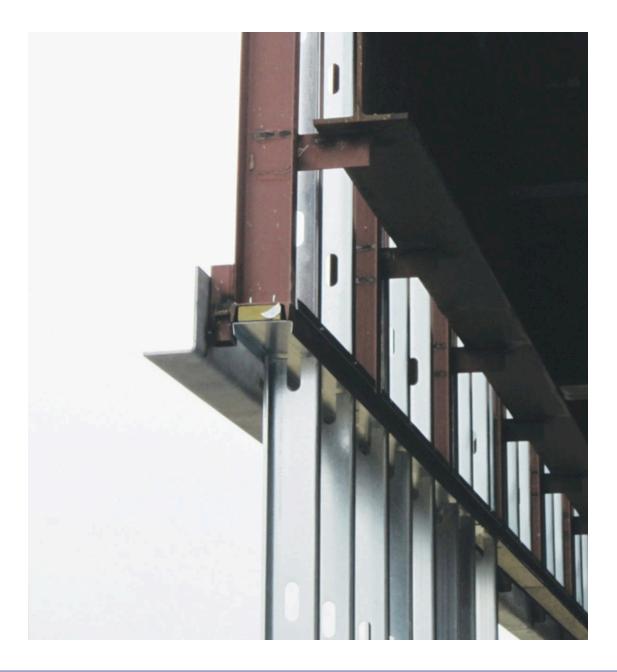

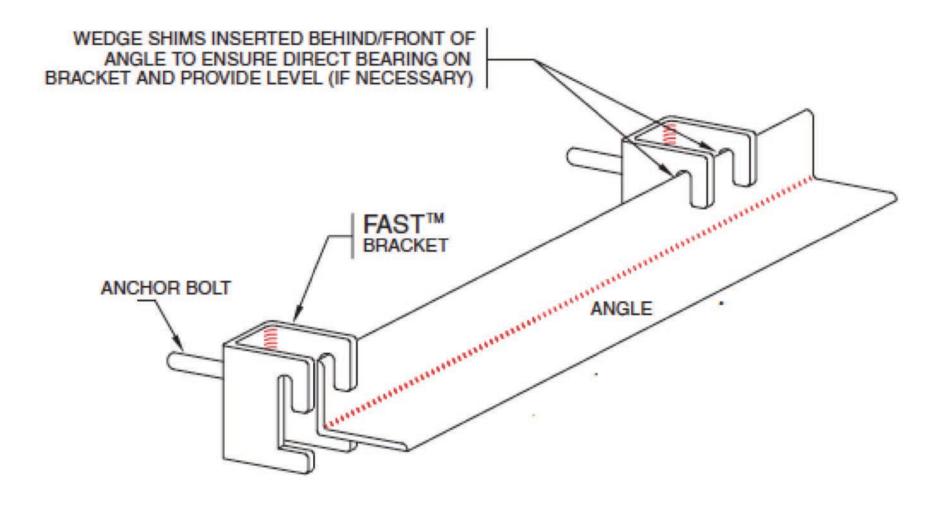

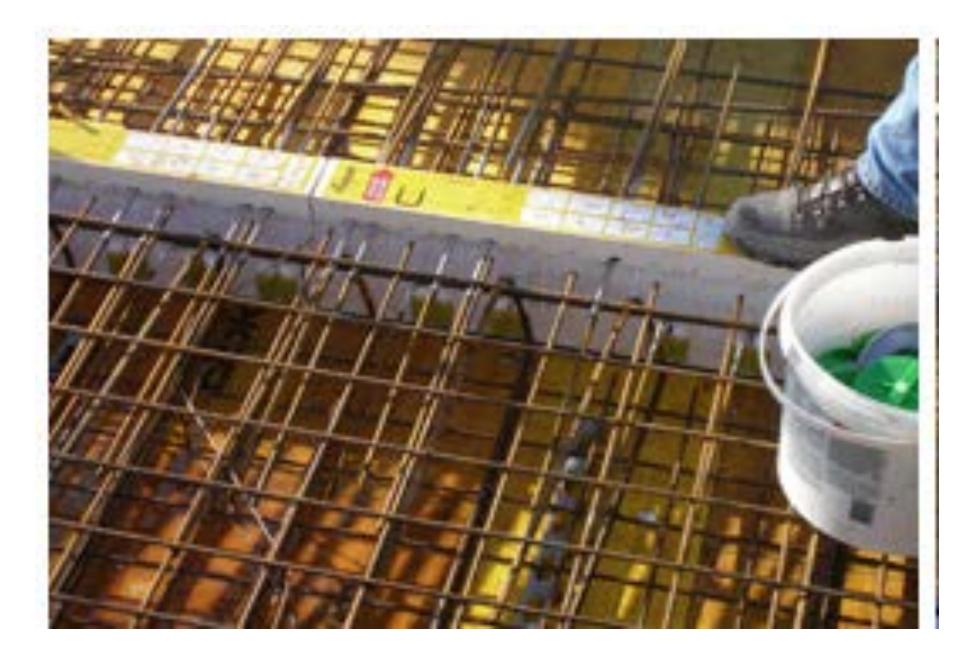



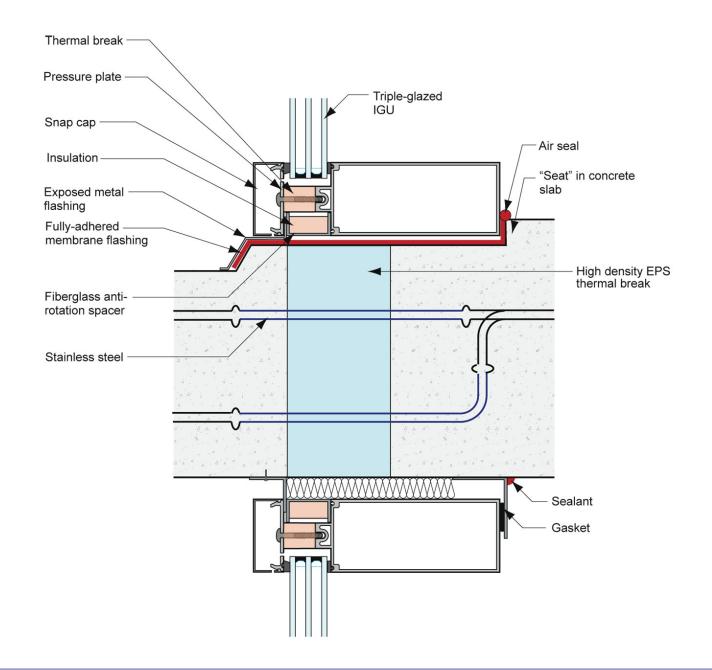

Zeroth Law – A=B and B=C therefore A=C First Law - Conservation of Energy Second Law - Entropy Third Law – Absolute Zero

## 2<sup>nd</sup> Law of Thermodynamics

## In an isolated system, a process can occur only if it increases the total entropy of the system

**Rudolf Clausius** 

Heat Flow Is From Warm To Cold Moisture Flow Is From Warm To Cold Moisture Flow Is From More To Less Air Flow Is From A Higher Pressure to a Lower Pressure Gravity Acts Down

## Moisture Flow Is From Warm To Cold Moisture Flow Is From More To Less


Moisture Flow Is From Warm To Cold Moisture Flow Is From More To Less

Thermal Gradient – Thermal Diffusion Concentration Gradient – Molecular Diffusion Moisture Flow Is From Warm To Cold Moisture Flow Is From More To Less

Thermal Gradient – Thermal Diffusion Concentration Gradient – Molecular Diffusion

Vapor Diffusion


## **Thermodynamic Potential**

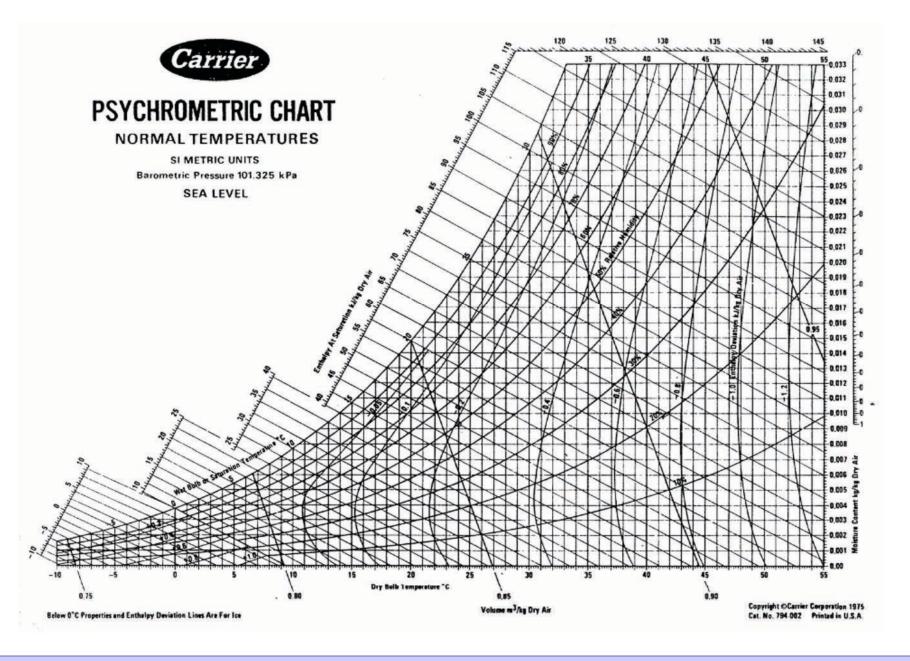


**Building Science Corporation** 




Vapor

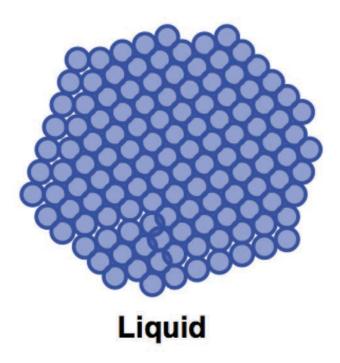


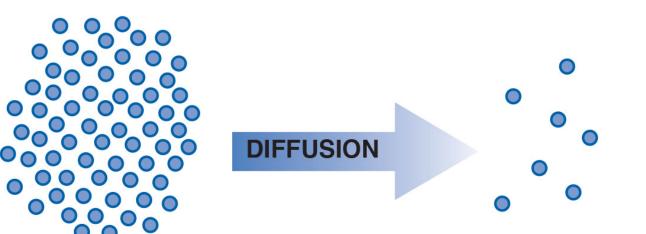



Higher Dewpoint Temperature Higher Water Vapor Density or Concentration (Higher Vapor Pressure) on Warm Side of Assembly Low Dewpoint Temperature Lower Water Vapor Density or Concentration (Lower Vapor Pressure) on Cold Side of Assembly




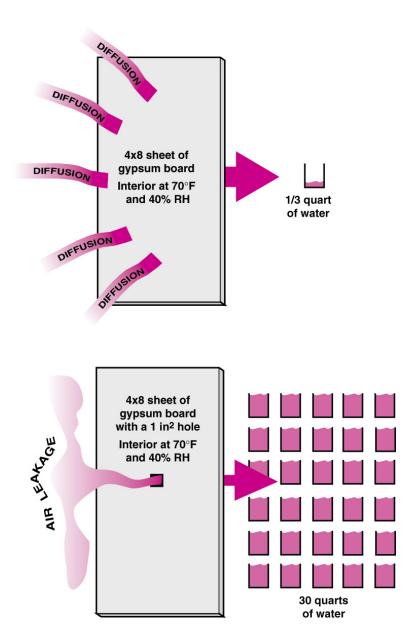


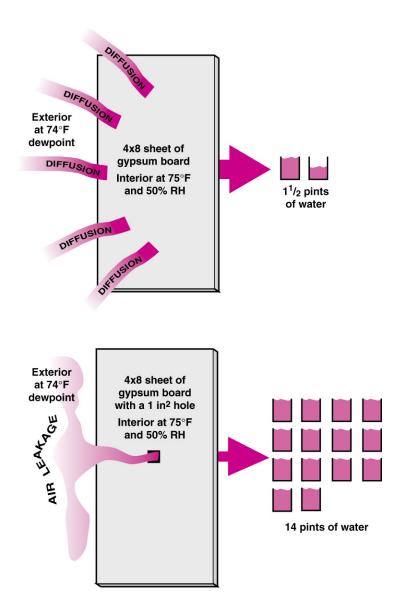


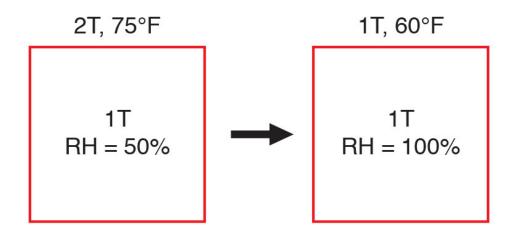


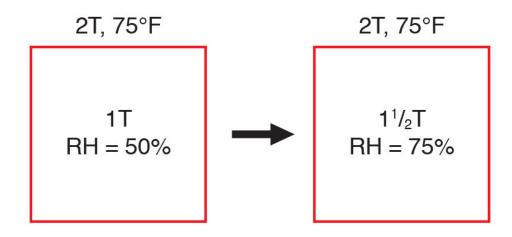


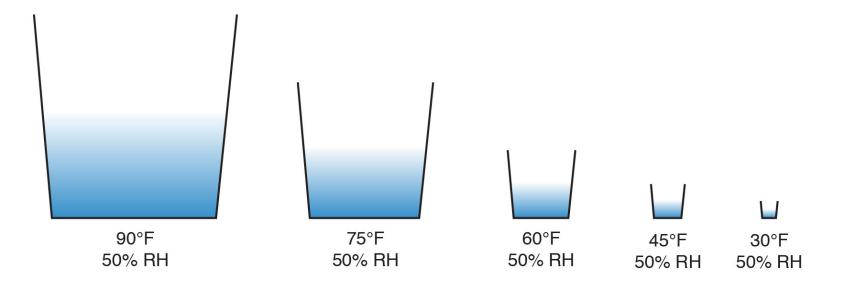


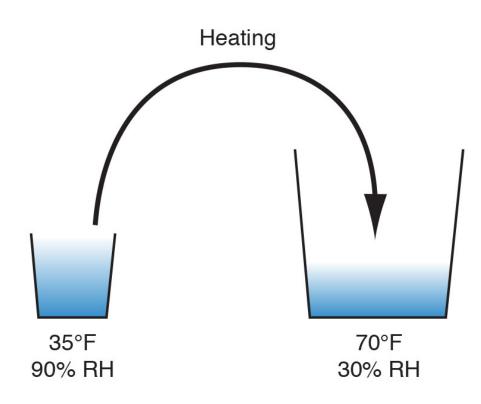

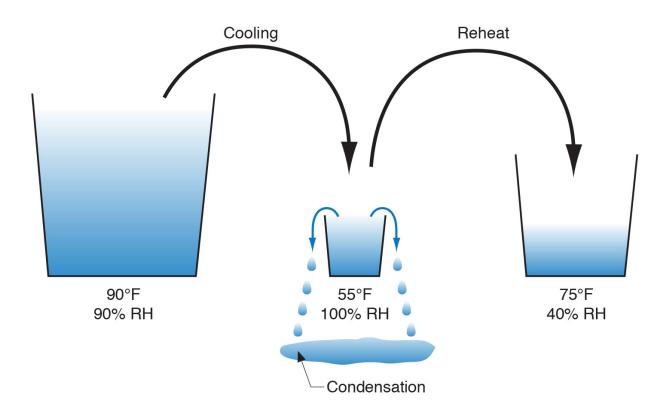

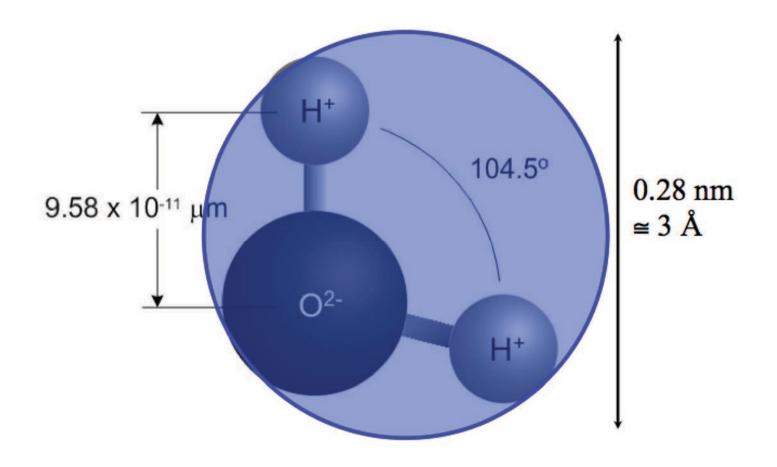

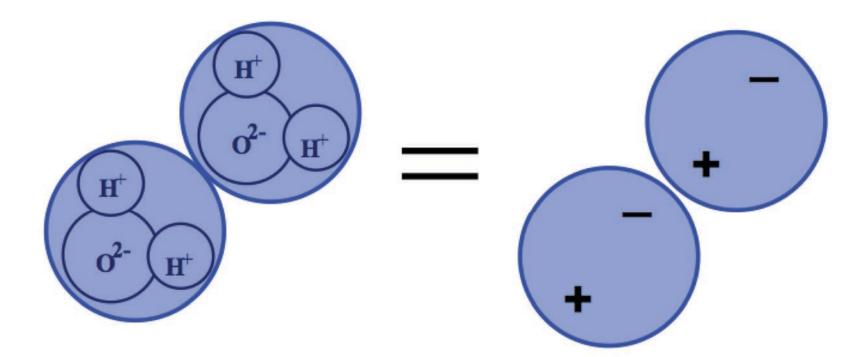

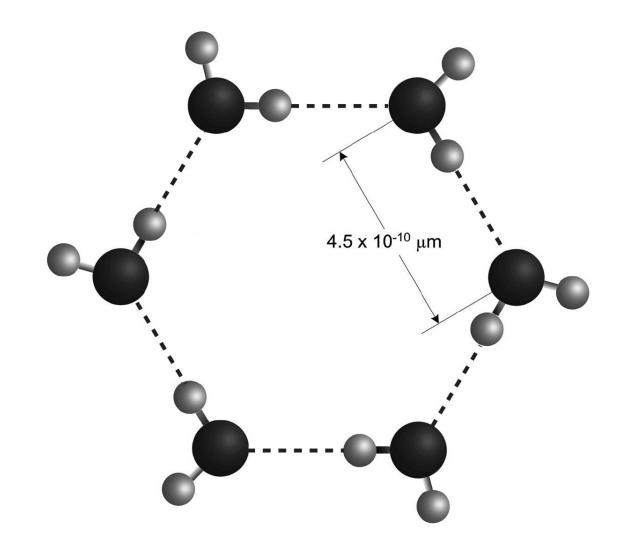

Building Science Corporation

## **Damage Functions**


Damage Functions Water Heat Ultra Violet Radiation Damage Functions Water Heat Ultra Violet Radiation


Oxidization (Ozone) Fatigue (Creep) The Three Biggest Problems In Buildings Are Water, Water and Water...

# Heat Air Moisture

### HAM

## Hygrothermal Analysis

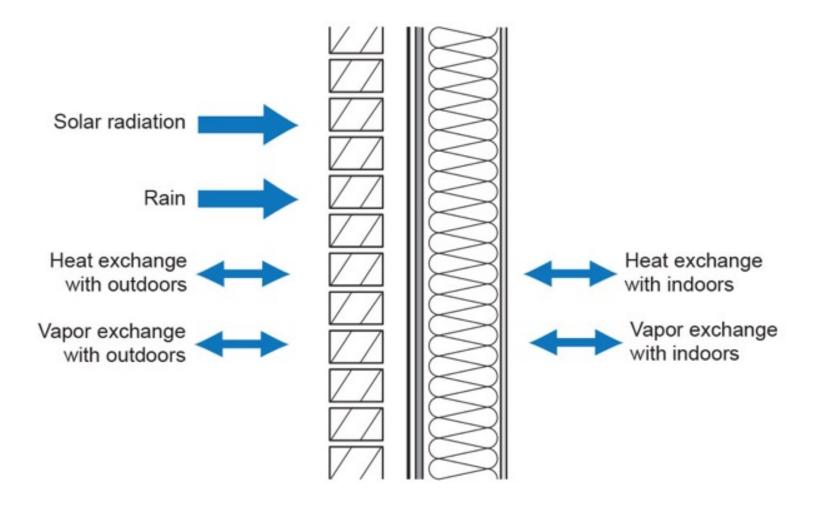

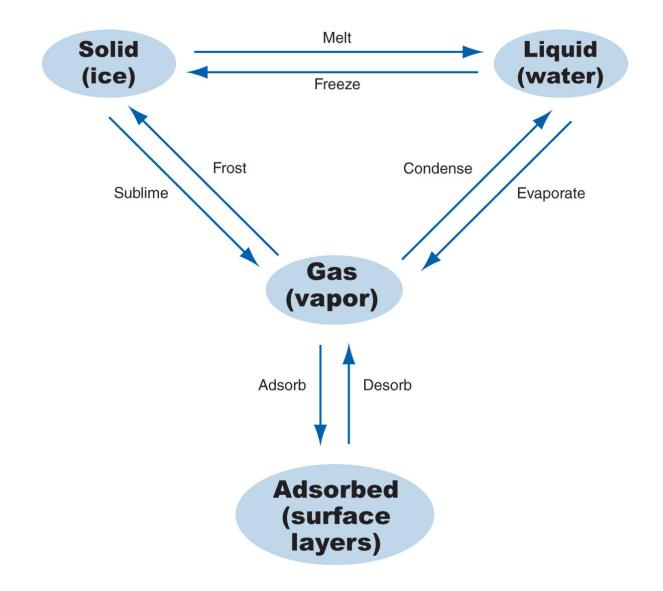

#### **Moisture Transport in Porous Media**

Phase	Transport Process	Driving Potential
Vapor	Diffusion	Vapor Concentration
Adsorbate	Surface Diffusion	Concentration
Liquid	Capillary Flow	Suction Pressure
	Osmosis	Solute Concentration

#### **Moisture Transport in Assemblies**

Phase	Transport Process	Driving Potential
Vapor	Diffusion	Vapor Concentration
	Convective Flow	Air Pressure
Adsorbate	Surface Diffusion	Concentration
Liquid	Capillary Flow	Suction Pressure
	Osmosis	Solute Concentration
	Gravitational Flow	Height
	Surface Tension	Surface Energy
	Momentum	Kinetic Energy
	Convective Flow	Air Pressure

Water Control Layer Air Control Layer Vapor Control Layer Thermal Control Layer